## AtlasScientific Environmental Robotics

V 3.3 Revised 10/21



Range

Accuracy

	0.01 – 100+ mg/L
0.01	- 400+ % saturation
	+/– 0.05 mg/L

**Dissolved Oxygen** 

Yes

**ASCII** 


Response time 1 reading every 420ms

Supported probes Any galvanic probe

Calibration 1 or 2 point

Temperature, salinity and pressure compensation

- Data protocol SMBus/I<sup>2</sup>C
- Default I<sup>2</sup>C address **0x67**
- Operating voltage **3.0V 3.6V**
- Data format

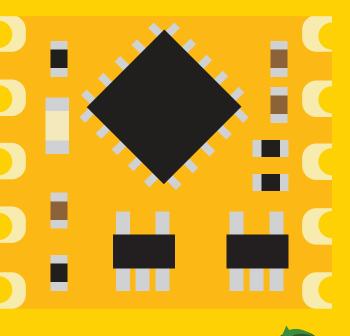

#### PATENT PROTECTED

Written by Jordan Press Designed by Noah Press

#### **SOLDERING THIS DEVICE VOIDS YOUR WARRANTY.**

Before purchasing the Dissolved Oxygen OEM<sup>™</sup> read this data sheet in its entirety. This product is designed to be surface mounted to a PCB of your own design.


This device is designed for electrical engineers who are familiar with embedded systems design and programing. If you, or your engineering team are not familiar with embedded systems design and programing, Atlas Scientific does not recommend buying this product.

# Get this device working in our OEM Development board first!

SCL GND INT PRB PRBG


Ð

#### Do not solder wires to this device.

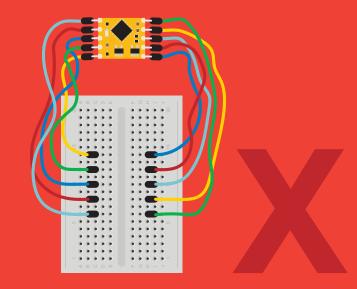

# Attention

# You may see these four pins soldered together. THIS IS NOT A MISTAKE.

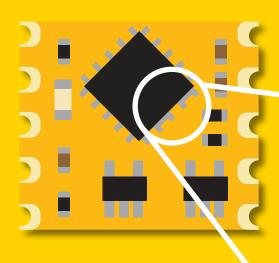



# **Table of contents**

OEM circuit dimensions	5
Power consumption	5
Absolute max ratings	5
Pin out	6
Resolution	6
Power on/start up	6

System overview	7
Reading register values	8
Writing register values	9
Sending floating point numbers	10
Receiving floating point numbers	11

## REGISTERS


	40
0x00 Device type register	13
0x01 Device version register	13
0x02 Address lock/unlock register	14
0x03 Address register	15
0x04 Interrupt control register	16
0x05 LED control register	18
0x06 Active/hibernate register	18
0x07 New reading available register	19
0x08 Calibration register	20
0x09 Calibration confirmation register	20
0x0A – 0x0D Salinity compensation registers	21
0x0E – 0x11 Pressure compensation registers	22
0x12 – 0x15 Temperature compensation registers	23
0x16 – 0x19 Salinity confirmation registers	24
0x1A – 0x1D Pressure confirmation registers	24
0x1E – 0x21 Temperature confirmation registers	24
0x22 – 0x25 D.O. in mg/L registers	25
0x26 – 0x29 D.O. in saturation registers	25

OEM electrical isolation	27
Designing your product	28
Designing your PCB	30
Recommended pad layout	31
IC tube measurements	31
Recommended reflow soldering profile	32
Pick and place usage	33
Datasheet change log	34
Firmware update	35



4 Copyright © Atlas Scientific LLC

# **OEM circuit dimensions**

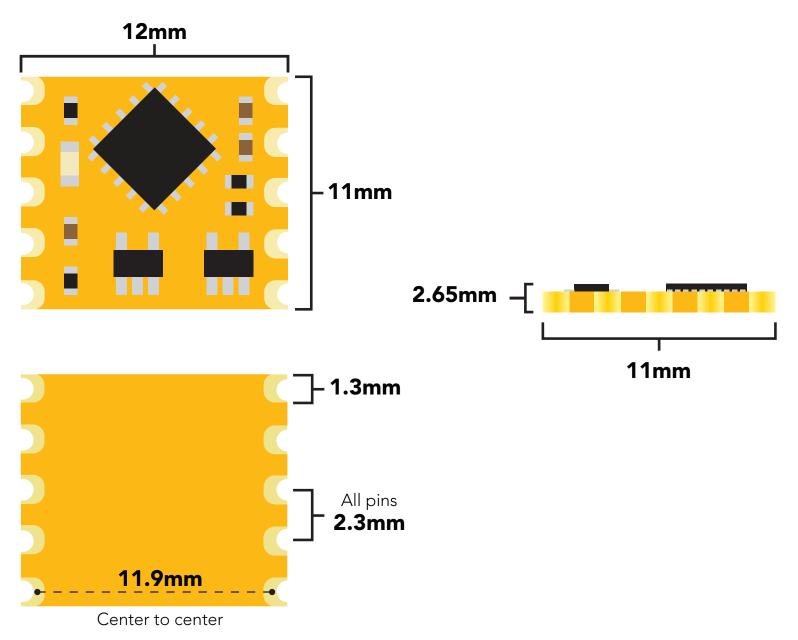


	LED	OPERATIONAL	HIBERNATION
3.3V	ON	2.46 mA	2.40 mA
	OFF	2.11 mA	2.09 mA

## **Power consumption** Absolute max ratings

Parameter	MIN	ТҮР	MAx
Storage temperature	-60 °C		150 °C
Operational temperature	-40 °C	25 °C	125 °C
VCC	3.0V	3.3V	4.0V



# Pin out

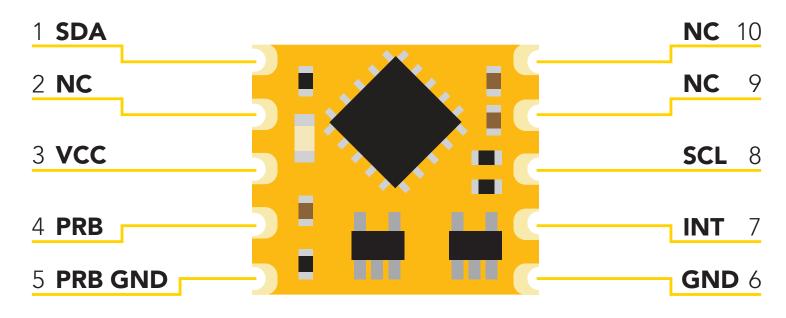

# Resolution

The resolution of a sensor is the smallest change it can detect in the quantity that it is measuring. The Atlas Scientific<sup>™</sup> Dissolved Oxygen OEM<sup>™</sup> will always produce a reading with a resolution of two decimal places.

#### Example

1.02 mg/L or 4.01% 9.47 mg/L or 98.78%

# Power on/start up

Once the Atlas Scientific<sup>™</sup> Dissolved Oxygen OEM<sup>™</sup> is powered on it will be ready to receive commands and take readings after 1 ms. Communication is done using the SMBus/I<sup>2</sup>C protocol at speeds of 10 – 100 kHz.

Settings that are retained if power is cut	Settings that are <b>NOT</b> retained if power is cut
Calibration I²C address	Active/Hibernation mode LED control
	Interrupt control Salinity compensation
	Pressure compensation

Temperature compensation

# System overview


The Atlas Scientific<sup>™</sup> Dissolved Oxygen OEM<sup>™</sup> Class Embedded Circuit is the core electronics needed to read Dissolved Oxygen of water from any off the shelf galvanic dissolved oxygen probe. The Dissolved Oxygen OEM<sup>™</sup> Embedded Circuit will meet, or exceed the capabilities and accuracy found in all models of bench top laboratory grade Dissolved Oxygen meters.

The Dissolved Oxygen OEM<sup>™</sup> is an SMBus/I<sup>2</sup>C slave device that communicates to a master device at a speed of 10 – 100 kHz. Read and write operations are done by accessing 42 different 8 bit registers.

### Accessible registers

Device information	
0x00: Device type	R
0x01: Firmware version	R
Device address	
0x02: SMBus/I²C address lock/unlock	R/W
0x03: SMBus/I²C address	R/W
Control	
0x04: Interrupt control	R/W
0x05: LED control	R/W
0x06: Active/hibernate	R/W
0x07: New reading available	R/W
Calibration	
0x08: Calibration	W
0x09: Calibration confirm	R
Compensation	
0x0A: Salinity compensation MSB	R/W
0x0B: Salinity compensation high byte	R/W
0x0C: Salinity compensation low byte	R/W
0x0D: Salinity compensation LSB	R/W
0x0E: Pressure compensation MSB	R/W
0x0F: Pressure compensation high byte	R/W
0x10: Pressure compensation low byte	R/W
0x11: Pressure compensation LSB	R/W
0x12: Temperature compensation MSB	R/W
0x13: Temperature compensation high byte	R/W
0x14: Temperature compensation low byte	R/W
0x15: Temperature compensation LSB	R/W

The default device address is **0x67** This address can be changed.

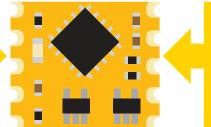

Read only **(**) Write only 🚻 Read and write R/W

#### Confirmation

0x16: Salinity confirmation MSB	R
0x17: Salinity confirmation high byte	R
0x18: Salinity confirmation low byte	R
0x19: Salinity confirmation LSB	R
0x1A: Pressure confirmation MSB	R
0x1B: Pressure confirmation high byte	R
0x1C: Pressure confirmation low byte	R
0x1D: Pressure confirmation LSB	R
0x1E: Temperature confirmation MSB	R
0x1F: Temperature confirmation high byte	R
0x20: Temperature confirmation low byte	R
0x21: Temperature confirmation LSB	R
Sensor Data	
0x22: D.O. in mg/L MSB	R
0x23: D.O. in mg/L high byte	R
0x24: D.O. in mg/L low byte	R
0x25: D.O. in mg/L LSB	R
0x26: D.O. in saturation MSB	R
0x27: D.O. in saturation high byte	R
0x28: D.O. in saturation low byte	R
0x29: D.O. in saturation LSB	R

Each Dissolved Oxygen reading takes 420ms




# **Reading register values**

To read one or more registers, issue a write command and transmit the register address that should be read from, followed by a stop command. Then issue a read command, the data read will be the value that is stored in that register. Issuing another read command will automatically read the value in the next register. This can go on until all registers have been read. After reading the last register, additional read commands will return 0xFF. Issuing a stop command will terminate the read event.

The default device address is **0x67** This address can be changed.

#### Example

Start reading at register 0x04 and read 2 times.

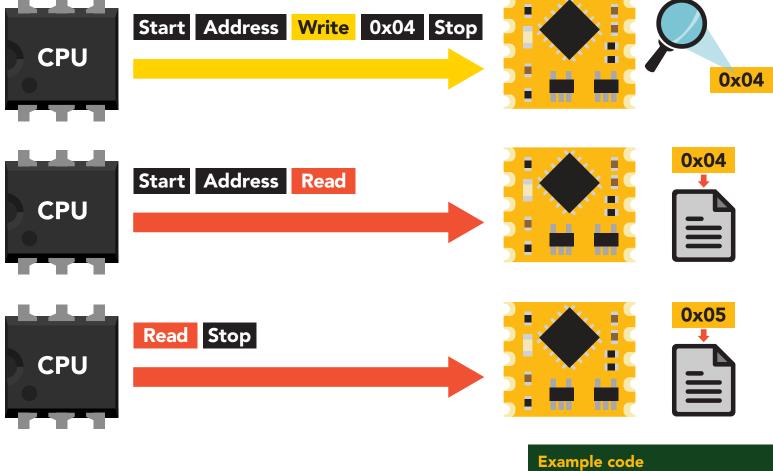

#### reading two registers

byte i2c\_device\_address=0x67; byte reg\_4, reg\_5;

Wire.beginTransmission(i2c\_device\_address); Wire.write(0x04); Wire.endTransmission();

Wire.requestFrom(i2c\_device\_address,2); reg\_4=Wire.read(); reg\_5=Wire.read();


# Writing register values

All registers can be read, but only registers marked read/write can be written to.

To write to one (*or more*) registers, issue a write command and transmit the register address that should be written to, followed by the data byte to be written. Issuing another write command will automatically write the value in the next register. This can go on until all registers have been written to. After writing to the last register, additional write commands will do nothing.

#### Example

Start writing at address 0x05 and write 2 values.

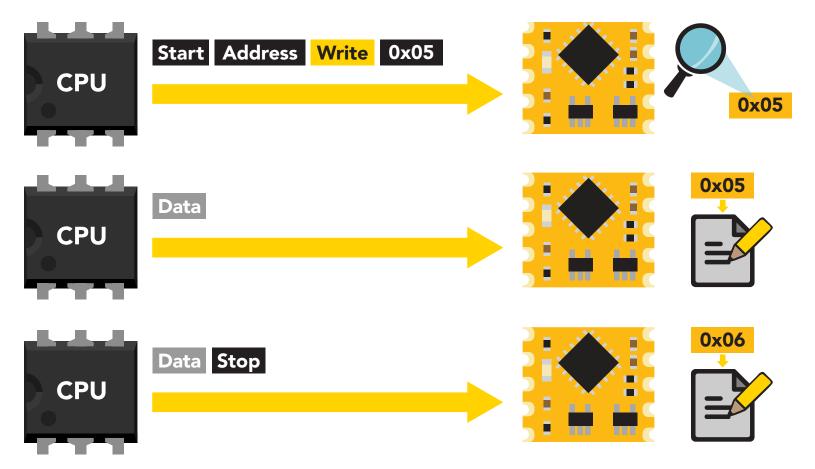

#### Example code writing the number 1 in register 0x05 – 0x06

byte i2c\_device\_address=0x67; byte starting\_register=0x05 byte data=1;

Wire.beginTransmission(i2c\_device\_address); Wire.write(starting\_register); Wire.write(data); Wire.write(data); Wire.endTransmission();

# Sending floating point numbers

For ease of understanding we are calling fixed decimal numbers "floating point numbers." We are aware they are not technically floating point numbers.

It is not possible to send/receive a floating (fixed decimal) point number over the SMBus/ I<sup>2</sup>C data protocol. Therefore, a multiplier/divider is used to remove the decimal point. Do not transmit a floating point number without property formatting the number first.

2 blocks of registers require the master to transmit a floating point number.

### Pressure compensation

**Temperature compensation** 

When transmitting a floating point number, the number must first be multiplied by 100. *(removing the decimal place)* Internally the Dissolved Oxygen OEM<sup>™</sup> will divide the number by 100, converting it back into a floating point number.

#### Example

Setting the water temperature to 22.72  $^{\circ}$ C 22.72 x **100** = 2272 Transmit the number 2272 to the temperature compensation register

Setting the atmospheric pressure compensation value to 92.82 kPa 92.82 x **100** = 9282 Transmit the number 9282 to the pressure compensation register

When reading back a value stored in one of these 2 register blocks the value must be divided by 100 to return it to its originally intended value.



# Receiving floating point numbers

4 blocks of registers require the master receive a floating point number.

Pressure confirmation	Temperature confirmation
D.O. in mg/L	D.O. in % saturation

After receiving a value from any of these 4 register blocks, the number must be divided by 100 to convert it back into a two decimal floating point number.

#### Example

Reading a pressure confirmation value of 102.56 kPa Value received = 10256 10256 / **100** = 102.56 kPa

Reading a temperature confirmation value of 99.06°C Value received = 9906 9906 / 100 = 99.06°C

Reading a D.O. value of 9.56 Value received = 956 956 / **100** = 9.56 mg/L

Reading a D.O. value of 88.65% saturation Value received = 8865 8865 / **100** = 88.65 % saturation



# Registers

# **Device information**

0x00: Device type 0x01: Firmware version

### **0x00 – Device type register**

1 unsigned byte Read only value = 3 3 = Dissolved Oxygen

This register contains a number indicating what type of OEM device it is.

### **0x01 – Firmware version register**

1 unsigned byte Read only value = 2 2 = firmware version

This register contains a number indicating the firmware version of the OEM device.

#### Example code reading device type and device version registers byte i2c\_device\_address=0x67; byte starting\_register=0x00 byte device\_type; byte version\_number; Wire.beginTransmission(i2c\_device\_address); Wire.write(staring\_register); Wire.endTransmission();

Wire.requestFrom(i2c\_device\_address,(byte)2); device\_type = Wire.read(); version\_number = Wire.read(); Wire.endTransmission();

0x00
0x01
0x02
0x03
0x04
0x05
0x06
0x07
0x08
0x09
<b>0x0A</b>
<b>0x0B</b>
0x0C
0x0D
0x0E
0x0F
0x10
0x11
0x12
0x13
0x14
0x15
0x16
0x17
0x18
0x19
0x1A
0x1B
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24 0x25
0x25 0x26
0x28 0x27
0x27 0x28
0x28 0x29
-0727

# Changing I<sup>2</sup>C address

```
0x02: SMBus/l<sup>2</sup>C address lock/unlock R/W
0x03: SMBus/l<sup>2</sup>C address R/W
```

#### This is a 2 step procedure

To change the I<sup>2</sup>C address, an unlock command must first be issued.

Step 1 Issue unlock command

0x02 – I <sup>2</sup> C address unlock register				
1 unsigned byte Read only value = 0 or 1 0 = unlocked 1 = locked				
To unlock this register it must be written to twice.				
Start unlock register 0x55 Stop				
Start unlock register 0xAA Stop				

The two unlock commands must be sent back to back in immediate succession. No other write, or read event can occur. Once the register is unlocked it will equal 0x00 (unlocked).

#### To lock the register

Write any value to the register other than 0x55; or, change the address in the Device Address Register.

#### Example code address unlock byte i2c\_device\_address=0x67; byte unlock\_register=0x02; Wire.beginTransmission(bus\_address); Wire.write(unlock\_register); Wire.write(0x55); Wire.endTransmission();

Wire.beginTransmission(bus\_address); Wire.write(unlock\_register); Wire.write(0xAA); Wire.endTransmission();

0x00	
0x01	
0x02	
0x03	
0x04	
0x05	
0x06	
0x07	
0x08	
0x09	
0x0A	
0x0B	
0x0C	
0x0D	
0x0E	
0x0F	
0x10	
0x11	
0x12	
0x13	
0x14	
0x15	
0x16	
0x17	
0x18	
0x19	
<b>0x1A</b>	
0x1B	
0x1C	
0x1D	
0x1E	
0x1F	
0x20	
0x21	
0x22 0x23	
0x23 0x24	
0x24 0x25	
0x25 0x26	
0x20 0x27	
0x27 0x28	
0x28 0x29	

### Step 2 Change address

### 0x03 – I<sup>2</sup>C address register

1 unsigned byte Default value = **0x67** Address can be changed **0x01 – 0x7F (1–127)** 

#### Address changes outside of the possible range **0x01 – 0x7F (1–127)** will be ignored.

After a new address has been sent to the device the Address lock/unlock register will lock and the new address will take hold. It will no longer be possible to communicate with the device using the old address.



#### Settings to this register are retained if the power is cut.

#### Example code changing device address

byte i2c\_device\_address=0x67; byte new\_i2c\_device\_address=0x60; byte address\_reg=0x03;

Wire.beginTransmission(bus\_address); Wire.write(address\_reg); Wire.write(new\_i2c\_device\_address); Wire.endTransmission();

**0x00** 0x01 0x02 0x03 0x04 **0x05 0x06** 0x07 0x08 0x09 **0x0A 0x0B 0x0C** 0x0D **0x0E** 0x0F 0x10 **0x11** 0x12 0x13 0x14 **0x15** 0x16 0x17 0x18 0x19 **0x1A 0x1B 0x1C** 0x1D **0x1E 0x1F** 0x20 0x21 0x22 0x23 0x24 0x25 0x26 0x27 0x28 0x29

# **Control registers**

R/W R/W R/W

0x04: Interrupt control	
0x05: LED control	
0x06: Active/hibernate	
0x07: New reading available	


### 0x04 – Interrupt control register

1 unsigned byte Default value = 0 (disabled)

#### **Command values**

0 = disabled

- 2 = pin high on new reading (manually reset)
- 4 = pin low on new reading (manually reset)
- 8 = invert state on new reading (automatically reset)

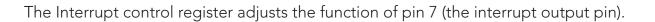


Settings to this register are **not** retained if the power is cut.

### Pin high on new reading

### Command value = 2

By setting the interrupt control register to 2 the pin will go to a low state (0 volts). Each time a new reading is available the INT pin (pin 7) will be set and output the same voltage that is on the VCC pin.

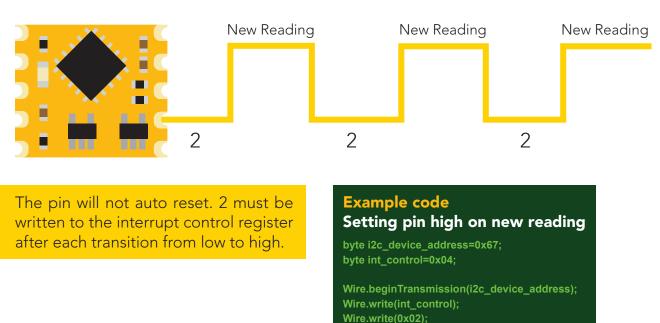

0x00
0x01
0x02
0x03
0x04
0x05
0x06
0x07
0x08
0x09
<b>0x0A</b>
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x11
0x12
0x13
0x14 0x15
0x15 0x16
0x10 0x17
0x17 0x18
0x18 0x19
0x17
0x1A
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24
0x25
0x26
0x27
0x28
0x29


Pin 7

Wire.endTransmission();


### Pin low on new reading

### Command value = 4

By setting the interrupt control register to 4 the pin will go to a high state (VCC). Each time a new reading is available the INT pin (pin 7) will be reset and the pin will be at 0 volts.

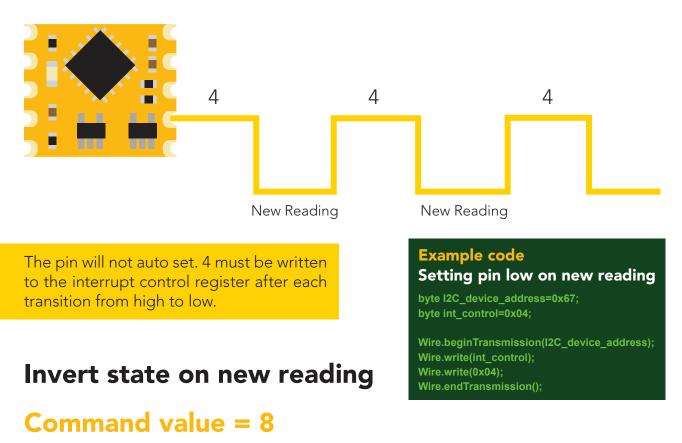

By setting the interrupt control register to 8 the pin will remain in whatever state it is in. Each time a new reading is available the INT pin (pin 7) will invert its state.

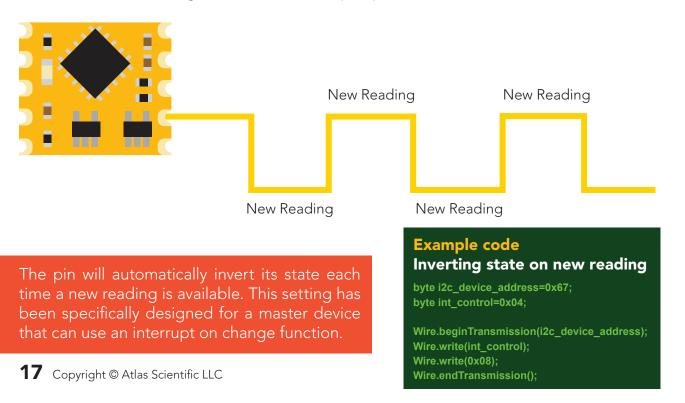

### 0x05 – LED control register

1 unsigned byte

#### **Command values**

1 = Blink each time a reading is taken 0 = Off

The LED control register adjusts the function of the on board LED. By default the LED is set to blink each time a reading is taken.

#### Example code Turning off LED

byte i2c\_device\_address=0x67; byte led\_reg=0x05;

Wire.beginTransmission(i2c\_device\_address); Wire.write(led\_reg); Wire.write(0x00); Wire.endTransmission();



Settings to this register are **not** retained if the power is cut.


### 0x06 – Active/hibernate register

1 unsigned byte

**To wake the device** Transmit a 0X01 to register 0x06

**To hibernate the device** Transmit a 0X00 to register 0x06

This register is used to activate, or hibernate the sensing subsystem of the OEM device.

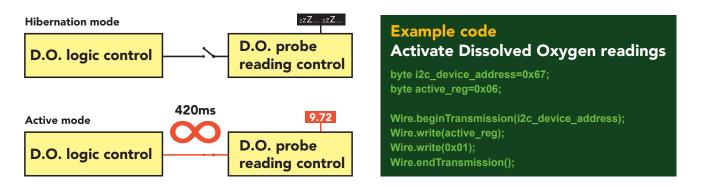

Once the device has been woken up it will continuously take readings every 420ms. **Waking the device is the only way to take a reading. Hibernating the device is the only way to stop taking readings.** 

0x00
0x01
0x02
0x03
0x04
0x05
0x06
0x07
0x08
0x09
<b>0x0A</b>
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x11
0x12
0x13
0x14
0x15
0x16
0x17
0x18
0x19
0x1A
0x1B
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x23
0x24
0x25
0x27
0x27
0x20

### 0x07 – New reading available register

1 unsigned byte Default value = 0 (no new reading) New reading available = 1

#### **Command values**

0 = reset register

This register is for applications where the interrupt output pin cannot be used and continuously polling the device would be the preferred method of identifying when a new reading is available.

When the device is powered on, the New Reading Available Register will equal 0. Once the device is placed into active mode and a reading has been taken, the New Reading Available Register will move from 0 to 1.

This register will never automatically reset itself to 0. The master must reset the register back to 0 each time.

### Example code

#### Polling new reading available register

byte i2c\_device\_address=0x67; byte new\_reading\_available=0; byte nra=0x07;

while(new\_reading\_available==0){ Wire.beginTransmission(i2c\_device\_address); Wire.write(nra); Wire.endTransmission();

Wire.requestFrom(i2c\_device\_address,(byte)1);
new\_reading\_available = Wire.read();
Wire.endTransmission();
delay(10);
}

if(new\_reading\_available==1){
 call read\_Dissolved Oxygen();
 Wire.beginTransmission(i2c\_device\_address);
 Wire.write(nra);
 Wire.write(0x00);
 Wire.endTransmission();
}

}

0x00
0x01
0x02
0x03
0x04
0x05
0x06
0x07
0x08
0x09
<b>0x0A</b>
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x11 0x12
0x12 0x13
0x13 0x14
0x14
0x15
0x17
0x18
0x19
0x1A
0x1B
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24
0x25
0x26
0x27
0x28
0x29

# Calibration

0x08: Calibration 0x09: Calibration confirm W R

### 0x08 – Calibration register

1 unsigned byte

#### **Command values**

- 1 = clear all previous calibration
- 2 = calibrate to atmospheric oxygen content
- 3 = calibrate to 0 dissolved oxygen

After loading the register with the desired calibration type and an SMBus/I<sup>2</sup>C stop condition has been issued, calibration will occur.

The 2 register calibration block is used to perform calibration, and verify that calibration has been done.

The Dissolved Oxygen OEM<sup>™</sup> is capable of one or two-point calibration. Once the calibration register has been set to a desired calibration type and a SMBus/I<sup>2</sup>C stop condition has been issued, calibration will occur. The calibration confirmation register is used to confirm that calibration was done.

The calibration process takes 40 ms

### **0x09 – Calibration confirmation register**

1 unsigned byte

#### **Read only values**

- 0 = no calibration
- 1 = calibrated to atmosphere
- 2 = calibrated to 0 Dissolved Oxygen
- 3 = calibrated to both atmospheric and 0 Dissolved Oxygen

After a calibration event has been successfully carried out, the calibration confirmation register will reflect what calibration has been done.



Settings to this register are retained if the power is cut.

0x08
0x09
0x0A
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x11
0x12
0x13
0x14
0x15
0x16
0x17
0x18
0x19
0x1A
0x1B
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24
0x25
0x26
0x27
0x28
0x29

**0x00** 

<mark>0x01</mark> 0x02 0x03

0x04 0x05 0x06

0x07

# **Salinity compensation**

0x0A: Salinity compensation MSB 0x0B: Salinity compensation high byte 0x0C: Salinity compensation low byte 0x0D: Salinity compensation LSB

R/W R/W R/W R/W

### 0x0A – 0x0D Salinity compensation registers

Unsigned long 0x0A = MSB 0x0D = LSB Default value = 0 µs Units = "µs" microsiemens

Salinity effects waters ability to hold oxygen. Transmitting the conductivity (in microsiemens) of the water to the salinity compensation registers will correct the dissolved oxygen readings to account for the waters salinity.

To send a new conductivity value to the salinity compensation register the value must first multiplied by 100, moved to an unsigned long and broken up into 4 bytes. Then it can be transmitted (MSB to LSB) to the salinity compensation register.



Settings to this register are **not** retained if the power is cut.

#### Example

Setting the register to 56,000µs 56,000 x 100 = 5,600,000 5,600,000 → Unsigned long Unsinged long = Hex (0x00, 0x55, 0x73, 0x00) 0x0A 0x0B 0x0C 0x0D

0x00
0x00
0x01
0x02 0x03
0x03
0x04
0x05 0x06
0x07
0x07
0x09
0x07
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x10
0x12
0x12
0x14
0x15
0x16
0x17
0x18
0x19
0x1A
0x1B
0x1C
0x1D
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24
0x25
0x26
0x27
0x28
0x29

## **Pressure compensation**

0x0E: Pressure compensation MSB	R/\
0x0F: Pressure compensation high byte	R/\
0x10: Pressure compensation low byte	R/\
0x11: Pressure compensation LSB	<b>R/\</b>

### **0x0E – 0x11 Pressure compensation registers**

W

Unsigned long 0x0E = MSB 0x11 = LSB Default value = 101.32 kPa Units = "kPa" kilopascals

Pressure effects waters ability to hold oxygen. Transmitting the pressure (in kilopascals) of the atmosphere (for high altitude measurement) or the water pressure (for D.O. readings at depth) to the pressure compensation registers will correct the dissolved oxygen readings to account for the water/atmospheric pressure.

To send a new pressure value to the Pressure Compensation Register the value must first multiplied by 100, moved to an unsigned long and broken up into 4 bytes. Then it can be transmitted (MSB to LSB) to the pressure compensation register.

Pressure is always in "kPa" and can be a floating point number with no more than two decimal places.



#### Example

Setting the register to 135.86 kPa 135.86 x 100 = 13,586 13,586 → Unsigned long Unsinged long = Hex (0x00, 0x00, 0x35, 0x12) 0x0E 0x0F 0x10 0x11

0x00
0x01
0x02
0x03
0x04
0x05
0x06
0x07
0x08
0x09
<b>0x0A</b>
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x10
0x11
0x12
0x13
0x14
0x15
0x17
0x17
0x19
0x19
0x1A 0x1B
0x1C
0x1D 0x1E
0x1E 0x1F
0x20
0x21
0x22
0x23
0x24
0x25
0x26
0x27
0x28
0x29

22 Copyright © Atlas Scientific LLC

# **Temperature compensation**

0x12: Temperature compensation MSBR/W0x13: Temperature compensation high byteR/W0x14: Temperature compensation low byteR/W0x15: Temperature compensation LSBR/W

### 0x12 – 0x15 Temperature compensation registers

Unsigned long 0x12 = MSB 0x15 = LSB Default value = 20 °C Units = °C

Temperature effects waters ability to hold oxygen. Transmitting the temperature (in °C) of the water to the temperature compensation registers will correct the dissolved oxygen readings to account for the water temperature.

To send a new temperature value to the temperature compensation register the value must first multiplied by 100, moved to an unsigned long and broken up into 4 bytes. Then it can be transmitted (MSB to LSB) to the temperature compensation register.



Settings to this register are **not** retained if the power is cut.

#### Example

Setting the register to 13.78°C 13.78 x 100 = 1,378 1,378 → Unsigned long Unsinged long = Hex (0x00, 0x00, 0x05, 0x62) 0x12 0x13 0x14 0x15

0x00 0x01 0x02 0x03 0x04 0x05 **0x06**  $0 \times 07$ 0x08 0x09 **0x0A 0x0B 0x0C** 0x0D **0x0E** 0x0F 0x10 0x11 **0x12** 0x13 0x14 **0x15** 0x16 0x17 0x18 0x19 **0x1A 0x1B 0x1C** 0x1D **0x1E 0x1F** 0x20 0x21 0x22 0x23 0x24 0x25 0x26 0x27 0x28 0x29

# Salinity, pressure and temperature confirmation

0x16: Salinity confirmation MSB	ſ
0x17: Salinity confirmation high byte	ſ
0x18: Salinity confirmation low byte	
0x19: Salinity confirmation LSB	ſ
	_

0x1E: Temperature confirmation MSB	(
0x1F: Temperature confirmation high byte	
0x20: Temperature confirmation low byte	
0x21: Temperature confirmation LSB	

0x1A: Pressure confirmation MSB
0x1B: Pressure confirmation high byte
0x1C: Pressure confirmation low byte
0x1D: Pressure confirmation LSB

R R

### 0x16 – 0x19 Salinity confirmation registers

#### Unsigned long 0x16 = MSB 0x19 = LSB Default value = 0 µs Units = "µs" microsiemens

The value in this register is only updated when actively taking readings.

### **0x1A – 0x1D Pressure confirmation registers**

Unsigned long 0x1A = MSB 0x1D = LSB Default value = 101.32 kPa Units = "kPa" kilopascals

The value in this register is only updated when actively taking readings.

### **0x1E – 0x21 Temperature confirmation registers**

Unsigned long 0x1E = MSB 0x21 = LSB Default value = 25 °C Units = °C

The value in this register is only updated when actively taking readings.

This block of three 8 bit read only registers are the Salinity, pressure and temperature Confirmation registers. They are used to confirm that any one (or all) of the compensation values that were used to take the D.O. readings have been applied to the current reading. Whatever values are in these registers are the values that will be used to calculate the next D.O. reading.

**0x00** 0x01 0x02 0x03 0x04 0x05 **0x06** 0x07 0x08 0x09 **0x0A 0x0B 0x0C** 0x0D **0x0E** 0x0F 0x10 0x11 0x12 0x13 0x14 0x15 0x16 0x17 **0x18 0x19 0x1A 0x1B** 0x1C **0x1D 0x1E** 0x1F 0x20 0x21 0x22 0x23 0x24 0x25 0x26 0x27 0x28 0x29

# Sensor data

0x22: D.O. in mg/L MSB 0x23: D.O. in mg/L high byte 0x24: D.O. in mg/L low byte 0x25: D.O. in mg/L LSB

R	
R	
R	
R	

0x26: D.O. in saturation MSB 0x27: D.O. in saturation high byte 0x28: D.O. in saturation low byte 0x29: D.O. in saturation LSB

This 8 byte read only block of registers contains the D.O. readings. The first 4 byte block is the D.O. readings in mg/L. While the second 4-byte block is the D.O. readings in percent saturation.

Each time a new reading is taken the old reading is over written. The D.O. readings are stored as a 4 byte long (4 bytes for mg/L and 4 bytes for percent saturation) After reading each of the 4 bytes (MSB to LSB) and reassembling them into a long, the value should be moved (or cast) into a float and then divide by 100.

### 0x22 – 0x25 D.O. in mg/L registers

Unsigned long 0x22 = MSB 0x25 = LSB Default value = 0 mg/L Units = mg/L

The value in this register is only updated when actively taking readings.

The last D.O. reading taken, in mg/L is stored in these four registers.

To read the value in this register, read the bytes MSB to LSB and assign them to an unsigned long, cast to a float. Divide that number by 100.

### 0x26 – 0x29 D.O. in % saturation registers

Unsigned long 0x26 = MSB 0x29 = LSB Default value = 0 % sat Units = % sat

The value in this register is only updated when actively taking readings.


The last D.O. reading taken, in percent saturation is stored in these four registers.

To read the value in this register, read the bytes MSB to LSB and assign them to an unsigned long, cast to a float. Divide that number by 100.

0x00
0x01
0x02
0x03
0x04
0x05
0x06 0x07
0x07
0x09
0x0A
0x0B
0x0C
0x0D
0x0E
0x0F
0x10
0x11 0x12
0x12
0x14
0x15
0x16
0x17
0x18
0x19
0x1A
0x1B 0x1C
0x1C
0x1E
0x1F
0x20
0x21
0x22
0x23
0x24
0x25 0x26
0x26 0x27
0x27 0x28
0x29

### Reading Dissolved Oxygen of 8.34 mg/L

#### Step 1 read 4 bytes

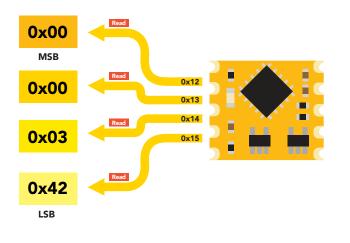



#### Step 3 cast unsigned long to a float



Step	4	divide	bv	100
2 C C P		annac	Νy	100

Float	Float					
834	/ 100 =	8.34				

Step 2 read unsigned long




# **OEM electrical isolation**

If the Dissolved Oxygen OEM<sup>™</sup> Class Embedded Dissolved Oxygen Circuit is going to be used in consumer, industrial, or scientific /medical applications electrical isolation is strongly recommended. Electrically isolating the device will insure that the readings are accurate, the Dissolved Oxygen probe does not interfere with other sensors and that outside electrical noise does not affect the device.

The goal of electrically isolating the Dissolved Oxygen OEM<sup>™</sup> circuit is to insure that the device no longer shares a common ground with the master CPU, other sensors and other devices that are can be traced back to a common ground. It is important to keep in mind that simply isolating the power and ground is not enough. Both data lines (SDA, SCL) and the INT pin must also be isolated.

This technology works by using tiny transformers to induce the voltage across an air gap. PCB layout requires special attention for EMI/EMC and RF Control, having proper ground planes and keeping the capacitors as close to the chip as possible are crucial for proper performance. The two data channels have a  $4.7k\Omega$  pull up resistor on both the isolated and non-isolated lines (R1, R2, R3, and R4) The output voltage is set using a voltage divider (R5, R6, and R,7) this produces a voltage of 3.9V regardless of your input voltage.

Isolated ground is different from non-isolated ground, these two lines should not be connected together.

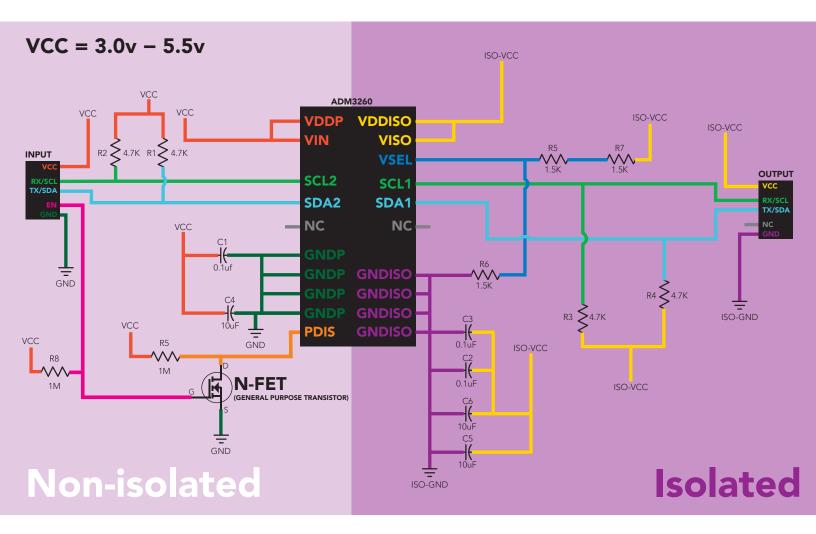


# **Designing your product**

The Dissolved Oxygen OEM<sup>™</sup> circuit is a sensitive device. Special care **MUST** be taken to ensure your Dissolved Oxygen readings are accurate.


### Simple design

Simple low voltage computer systems experience little to no problems during development and have no reported issues from the target customer.

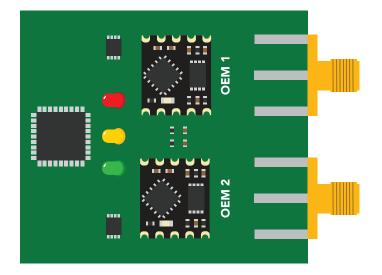

## **Complex design**

Complex computer systems with multiple voltages and switching, can lead to extended and unnecessary debugging time. Target customers can experience frequent accuracy issues.

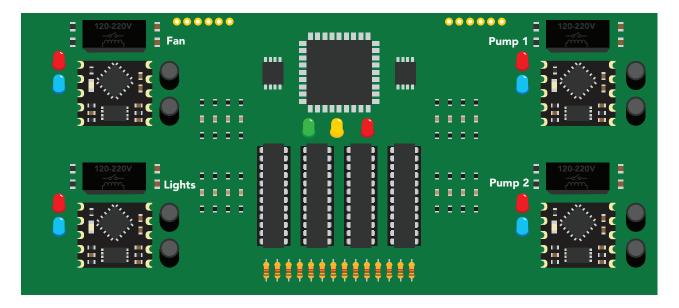




### How to add chemical sensing to a complex computer system

Placing the OEM<sup>™</sup> circuits onto their own board is **strongly recommended**; Not only does this help keep the design layout simple and easy to follow, it also significantly reduces debugging and development time.


Target customers will experience accurate, stable and repeatable readings for the life of your product.

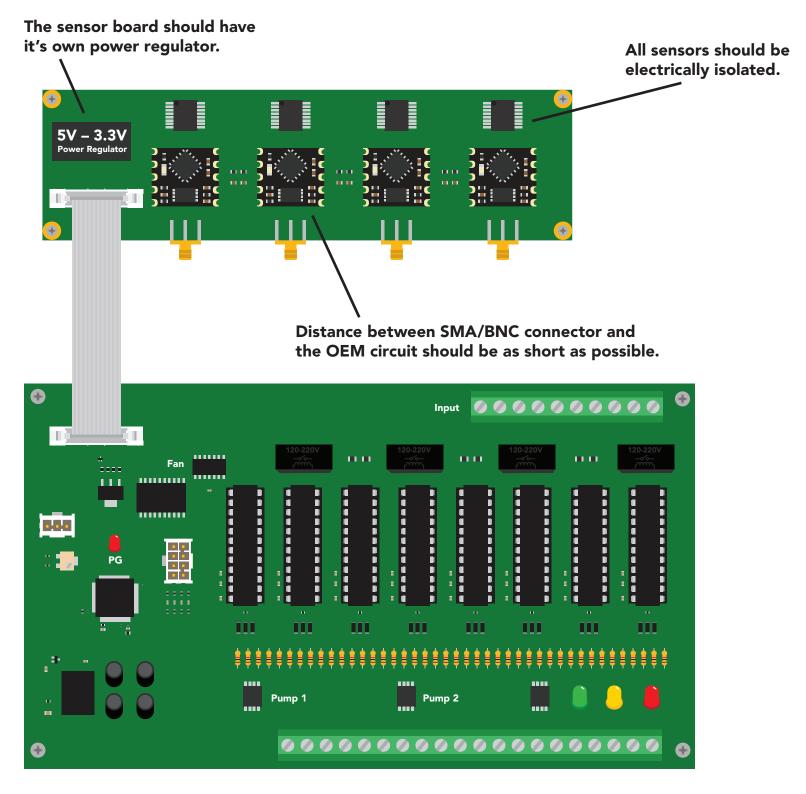



# **Designing your PCB**


Create the traces as short as possible from the Dissolved Oxygen OEM<sup>™</sup> to your probe connection. Keep the traces on your top layer, keep a distance of 1mm for any other trace. use 0.4mm trace width. Use a ground plane underneath the traces and probe connection.

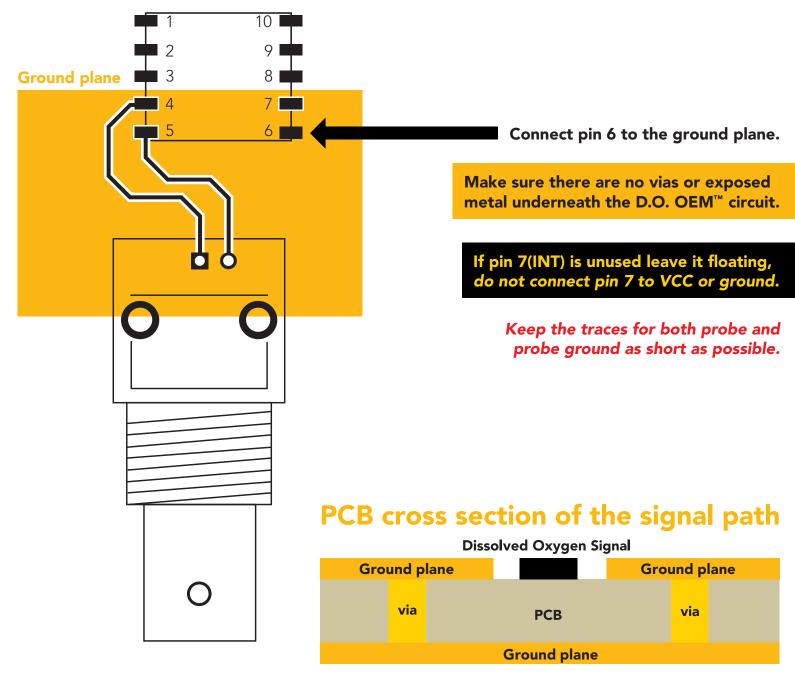

This cross section is an example of how the ground plane protects the Dissolved Oxygen signal. The ground plane should surround the Dissolved Oxygen signal, on the top layer as well as the bottom layer.




# **Recommended pad layout**

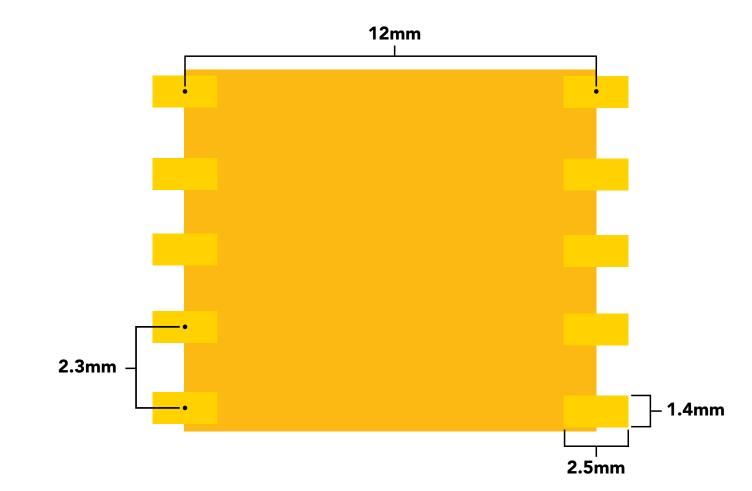


## **IC tube measurements**

**Top View** 

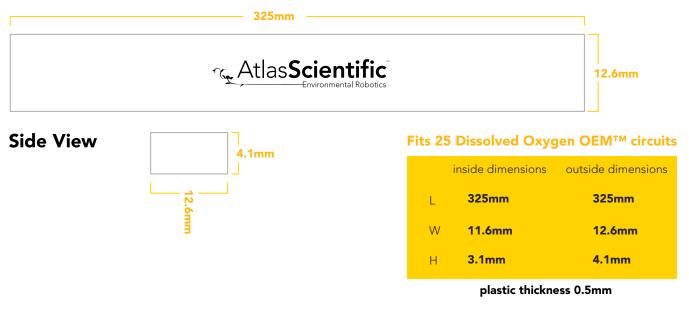




# Recommended reflow soldering profile

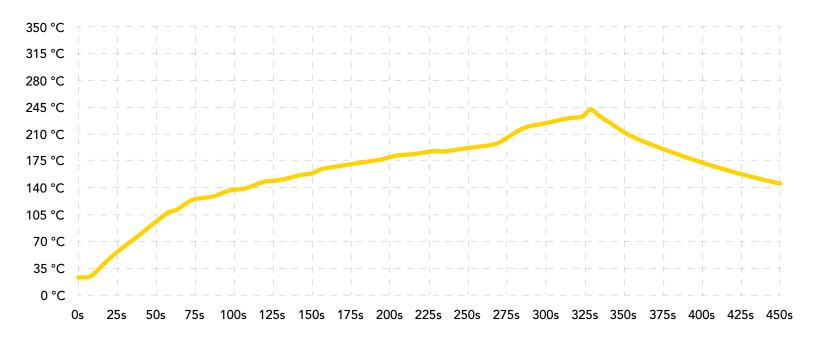

#	Temp	Sec										
1	30	15	11	163	10	21	182	10	31	100	25	
2	90	20	12	165	10	22	183	10	32	80	30	
3	110	8	13	167	10	23	185	10	33	30	30	
4	130	5	14	170	10	24	187	10	34	0	15	
5	135	5	15	172	10	25	220	30				
6	140	5	16	174	10	26	225	20				
7	155	8	17	176	10	27	230	20				
8	156	10	18	178	10	28	235	8				
9	158	10	19	180	10	29	170	20				
10	160	10	20	181	10	30	130	20				



# **Pick and place usage**

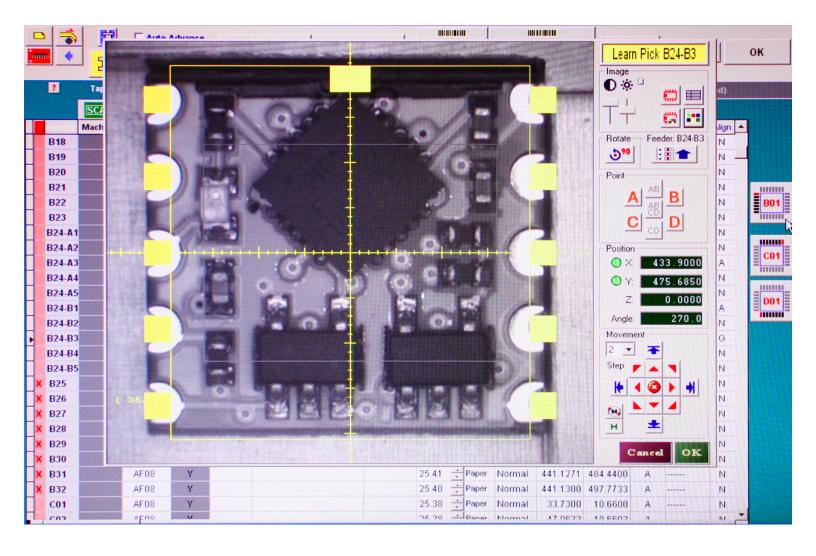



# Datasheet change log

#### Datasheet V 3.3

Revised operating voltages on pages 1 & 5.

#### Datasheet V 3.2

Revised artwork on pg 8.

Datasheet V 3.1

Added "Designing you product" on pg 28.

Datasheet V 3.0

Changed 0x08 – calibration register from R/W to W.

#### Datasheet V 2.9

Added an attention page about soldered pins on page 3.

#### Datasheet V 2.8

Revised information about desiging your own D.O. board on pg. 28

#### Datasheet V 2.7

Revised isolation schematic on pg. 27

#### Datasheet V 2.6

Revised PCB cross section illustration on pg. 28

#### Datasheet V 2.5

Changed "Max rate" to "Response time" on cover page.

#### Datasheet V 2.4

Updated cover page information & firmware changes made to device.

#### Datasheet V 2.3

Updated firmware changes made to device.



#### Datasheet V 2.2

Corrected accessible registers graphic on page 7.

Datasheet V 2.1

Corrected max rate reading on cover page.

#### Datasheet V 2.0

Revised entire document

# **Firmware updates**

V4.0 – Initial release (Mar 9, 2017)

V5.0 - (August 31, 2017)

• fixed a glitch where the calibration confirm byte wouldnt load on startup

V6.0 - (November 9, 2017)

• increased range for maximum reading

