



NOTES:

- 1. OPERATION
 - 1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
 - 2. SWING COVER OFF OF CONTACTS.
 - 3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
 - 4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.
- 2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.
- 3. WILL WORK WITH 10mm OR 12mm WIDE FLEX RIBBON.

JKL PART NO .: ZFS-CH144-12I

			DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS		JKL COMPONENTS CORPORATION									
				OTHERWISE \$ 1 PL +/- 2 PL +/-	REF.	TITLE					X TAPE			
			PROJECTION	ANGLE +/-										
Α	ADD NOTE 3	10/8/13	DRAWN BY	APPV'D BY	DATE 10/8/13	SIZE A	55335		,	ZFS-CH144-12I				
REV NO.	RELEASE & CANCEL PL-1206-02 DESCRIPTION/ECO NUMBER	3/5/13 APPV'D DATE	- CAD D MANUAL REVISIO	RAWING -	-	SCALE		RELEASE	[⊳] 3/5/13	REVISION DATE	10/8/13	REV. NO.	Α	SHEET 1 OF 1

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

JKL Components: ZFS-CH144-121