





www.ti.com

CEGOSTOS COTOSER 2000 TREVICES WINT 200

# HIGH-FREQUENCY, MULTIPHASE CONTROLLER

Check for Samples: TPS40090, TPS40091


#### **FEATURES**

- Two-, Three-, or Four-Phase Operation
- 5-V to 15-V Operating Range
- Programmable Switching Frequency Up to 1-MHz/Phase
- Current Mode Control With Forced Current Sharing<sup>(1)</sup>
- (1) Patent pending.
- 1% Internal 0.7-V Reference
- Resistive Divider Set Output Voltage
- True Remote Sensing Differential Amplifier
- Resistive or DCR Current Sensing
- Current Sense Fault Protection
- Programmable Load Line
- Compatible with UCC37222 Predictive Gate Drive™ Technology Drivers
- 24-Pin Space-Saving TSSOP Package
- 28-Pin QFN Package
- TPS40090: Binary Outputs
- TPS40091: 3-State Outputs


## **APPLICATIONS**

- Internet Servers
- Network Equipment
- Telecommunications Equipment
- DC Power Distributed Systems

#### PW PACKAGE (TOP VIEW)

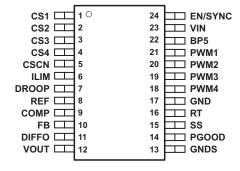

# RHD PACKAGE (BOTTOM VIEW)

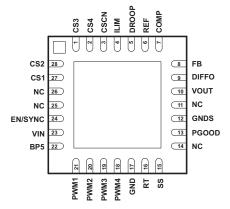

## **DESCRIPTION**

The TPS4009x is a two-, three-, or four-phase programmable synchronous buck controller that is optimized for low-voltage, high-current applications powered by a 5-V to 15-V distributed supply. A multi-phase converter offers several advantages over a single power stage including lower current ripple on the input and output capacitors, faster transient response to load steps, improved power handling capabilities, and higher system efficiency.

Each phase can be operated at a switching frequency up to 1-MHz, resulting in an effective ripple frequency of up to 4-MHz at the input and the output in a four-phase application. A two-phase design operates 180 degrees out-of-phase, a three-phase design operates 120 degrees out-of-phase, and a four-phase design operates 90 degrees out-of-phase as shown in Figure 1.

The number of phases is programmed by connecting the de-activated phase PWM output to the output of the internal 5-V LDO. In two-phase operation the even phase outputs should be de-activated.

ΔΔ

Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.

Predictive Gate Drive is a trademark of Texas Instruments.





These devices have limited built-in ESD protection. The leads should be shorted together or the device placed in conductive foam during storage or handling to prevent electrostatic damage to the MOS gates.


## **DESCRIPTION CONTINUED**

The TPS4009x uses fixed frequency, peak current mode control with forced phase current balancing. When compared to voltage mode control, current mode results in a simplified feedback network and reduced input line sensitivity. Phase current is sensed by using either current sense resistors installed in series with output inductors or, for improved efficiency, by using the DCR (direct current resistance) of the filter inductors. The latter method involves generation of a current proportional signal with an R-C circuit (shown in Figure 10).

The R-C values are selected by matching the time constants of the R-C circuit and the inductor; R-C = L/DCR. With either current sense method, the current signal is amplified and superimposed on the amplified voltage error signal to provide current mode PWM control.

An output voltage droop can be programmed to improve the transient window and reduce size of the output filter. Other features include a single voltage operation, a true differential sense amplifier, a programmable current limit, soft-start and a power good indicator.

## SIMPLIFIED TWO-PHASE APPLICATION DIAGRAM

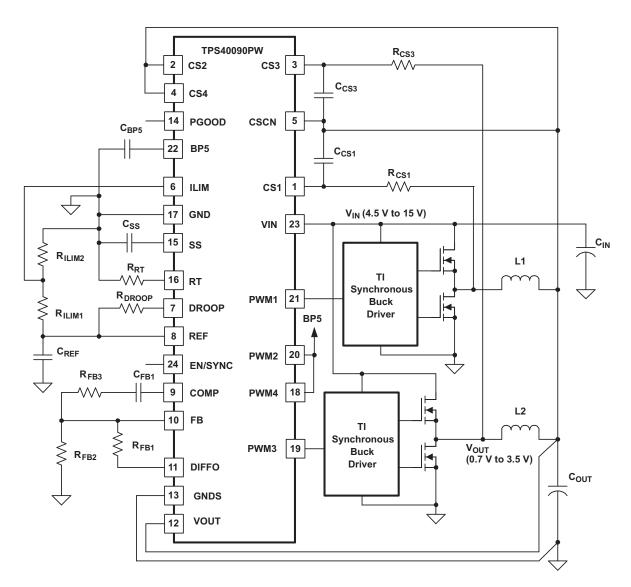

Submit Documentation Feedback



#### **ORDERING INFORMATION**

T <sub>A</sub>	PACKAGE <sup>(1)</sup>	OUTPUT	PART NUMBER				
	Plactic TSSOR (DM) (2)	Plastic TSSOP (PW) <sup>(2)</sup> Binary  T					
40°C to 95°C	Plastic 1550P (PW)	3-State	TPS40091PW				
40°C to 85°C	OEN (DUD)(3)		TPS40090RHDR				
	QFN (RHD) <sup>(3)</sup>		TPS40091RHDR				

- (1) For the most current package and ordering information, see the Package Option Addendum at the end of this document, or see the TI Web site at www.ti.com.
- (2) The PWP package is available taped and reeled. Add a R suffix to the device type (i.e., TPS40090PWR).
- (3) The RHD package is available taped and reeled. Add a R suffix to the device type (i.e., TPS40090RHDR) to order quantities of 3000 parts per reel. Add a T suffix to the device type (i.e., TPS40090RHDT) to order quantities of 250 parts per reel.

## **ABSOLUTE MAXIMUM RATING**

over operating free-air temperature range unless otherwise noted (1)

			TPS40090 TPS40091
V	Innut valtage renge	EN/SYNC, VIN,	16.5 V
V <sub>IN</sub>	Input voltage range	CS1, CS2, CS3, CS4, CSCN, DROOP, FB, GNDS, ILIM, VOUT	-0.3 V to 6 V
$V_{OUT}$	Output voltage range	REF, COMP, DIFFO, PGOOD, SS, RT, PWM1, PWM2, PWM3, PWM4, BP5	-0.3 V to 6 V
TJ	Operating junction temp	perature range	-40°C to 125°C
T <sub>stg</sub>	Storage temperature		-5°C to 150°C

<sup>(1)</sup> Stresses beyond those listed under "absolute maximum ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under "recommended operating conditions" is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

#### RECOMMENDED OPERATING CONDITIONS

		MIN	NOM	MAX	UNIT
$V_{IN}$	Input voltage	4.5		15	V
T <sub>A</sub>	Operating free-air temperature	-40		85	°C

Copyright © 2003–2006, Texas Instruments Incorporated



## **ELECTRICAL CHARACTERISTICS**

 $T_A = -40^{\circ}C$  to  $85^{\circ}C$ ,  $V_{IN} = 12$  V,  $R_{(RT)} = 64.9$  k $\Omega$ ,  $T_J = T_A$  (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
INPUT	SUPPLY					
V <sub>IN</sub>	Operating voltage range, VIN		4.5		15	
V <sub>IN</sub>	UVLO	Rising V <sub>IN</sub>	4.25		4.45	V
$V_{IN}$	UVLO <sup>(1)</sup>	Falling V <sub>IN</sub>	4.1		4.35	
I <sub>IN</sub>	Shutdown current, VIN			2	10	μΑ
I <sub>IN</sub>	Quiescent current switching	Four channels, 400 kHz each, no load		4	6	mA
OSCIL	LATOR/SYNCHRONIZATION		,			
	Phase frequency accuracy	Four channels, $R_{RT} = 64.9 \text{ k}\Omega$	370	415	455	
	Phase frequency set range <sup>(1)</sup>	Four channels	100		1200	kHz
	Synchronization frequency range <sup>(1)</sup>	Four channels	800		9600	
	Synchronization input threshold <sup>(1)</sup>	Four channels		V <sub>BP5</sub> /2		V
PWM			<u>,                                    </u>			
		4-phase operation		87.5%		
	Maximum duty cycle per channel	2- and 3-phase operation		83.3%		
	Minimum duty cycle per channel (1)				0	
	Minimum controllable on-time <sup>(1)</sup>			50	100	ns
ERROF	R AMPLIFIER		<del>-</del>			
	Feedback input voltage		0.693	0.700	0.707	V
	Feedback input bias current	V <sub>FB</sub> = 0.7 V		25	150	nA
V <sub>OH</sub>	High-level output voltage	I <sub>COMP</sub> = -1 mA	2.5	2.9		.,
V <sub>OL</sub>	low-level output voltage	I <sub>COMP</sub> = 1 mA		0.5	0.8	V
G <sub>BW</sub>	Gain bandwidth <sup>(1)</sup>			5		MHz
A <sub>VOL</sub>	Open loop gain <sup>(1)</sup>			90		dB
SOFT S	START					
I <sub>SS</sub>	Soft-start source current		3.5	5	6	μΑ
V <sub>SS</sub>	Soft-start clamp voltage		0.95	1.00	1.05	V
ENABL	.E		•			
	Enable threshold voltage		0.8	2	2.5	
	Enable voltage capability <sup>(1)</sup>				V <sub>IN(max)</sub>	V
PWM C	DUTPUT				, ,	
	PWM pull-up resistance	I <sub>OH</sub> = 5 mA		27	45	0
	PWM pull-down resistance	I <sub>OL</sub> = 10 mA		27	45	Ω
I <sub>lkg</sub>	PWM output leakage <sup>(1)</sup> (2)	3-State			1	μΑ
•	GULATOR		l .		-	
V <sub>OUT</sub>	Output voltage	External I <sub>LOAD</sub> = 2 mA on BP5	4.8	5	5.2	V
	Pass device voltage drop	V <sub>IN</sub> = 4.5 V, No external load on BP5			200	mV
	Short circuit current		10		30	mA

<sup>(1)</sup> Specified by design. Not production tested.(2) TPS40091 only.



## **ELECTRICAL CHARACTERISTICS (continued)**

 $T_A = -40$ °C to 85°C,  $V_{IN} = 12$  V,  $R_{(RT)} = 64.9$  k $\Omega$ ,  $T_J = T_A$  (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
CURRE	NT SENSE AMPLIFIER					
	Gain transfer	100 mV ≤ V <sub>(CS)</sub> ≤ 100 mV, V <sub>CSRTN</sub> = 1.5 V	4.9	5.4	5.9	V/V
	Gain variance between phases	V <sub>CS</sub> = 100 mV	-4%		4%	
	Input offset variance at zero current	V <sub>CS</sub> = 0 V	-3.5	0	3.5	mV
	Input common mode (3)		0		4	V
	Bandwidth <sup>(3)</sup>		18			MHz
DIFFER	ENTIAL AMPLIFIER					
	Gain			1		V/V
	Gain tolerance	V <sub>OUT</sub> 4 V vs 0.7 V, V <sub>GNDS</sub> = 0 V	-0.5%		0.5%	
CMRR	Common mode rejection ratio <sup>(3)</sup>	0.7 V ≤ V <sub>OUT</sub> ≤ 4 V	60			dB
	Bandwidth <sup>(3)</sup>		5			MHz
RAMP						
	Ramp amplitude (3)		0.4	0.5	0.6	V
POWER	GOOD					
	PGOOD high threshold	wrt V <sub>REF</sub>	10%		14%	
	PGOOD low threshold	wrt V <sub>REF</sub>	-14%		-10%	
$V_{OL}$	Low-level output voltage	I <sub>PGOOD</sub> = 4 mA		0.35	0.60	V
I <sub>lkg</sub>	PGOOD output leakage	V <sub>PGOOD</sub> = 5 V		50	80	μΑ
OUTPU	T OVERVOLTAGE/UNDERVOLTAGE	FAULT				
V <sub>OV</sub>	Overvoltage threshold voltage	V <sub>FBK</sub> relative to V <sub>REF</sub>	15%		19%	
$V_{UV}$	Undervoltage threshold voltage	V <sub>FBK</sub> relative to V <sub>REF</sub>	-18%		-14%	
LOAD L	INE PROGRAMMING					
I <sub>DROOP</sub>	Pull-down current on DROOP	4-phase, V <sub>CS</sub> = 100 mV		40		μA

<sup>(3)</sup> Specified by design. Not production tested.




## **Terminal Functions**

TE	RMINAL	_	1/0	DESCRIPTION
NAME	RHD			DESCRIPTION
BP5	22	22	0	Output of an internal 5V regulator. A 4.7-µF capacitor should be connected from this pin to ground. For 5V applications, this pin should be connected to VDD.
COMP	7	9	0	Output of the error amplifier. The voltage at this pin determines the duty cycle for the PWM.
CS1	27	1	I	
CS2	28	2	I	Used to sense the inductor current in the phases. Inductor current can be sensed with an external current sense
CS3	1	3	I	resistor or by using an external circuit and the inductor's DC resistance. They are also used for overcurrent protection and forced current sharing between the phases.
CS4	2	4	I	
CSCN	3	5	I	Common point of current sense resistors or filter inductors
DIFFO	9	11	0	Output of the differential amplifier. The voltage at this pin represents the true output voltage without drops that result from high current in the PCB traces
DROOP	5	7	I	Used to program droop function. A resistor between this pin and the REF pin sets the desired droop value.
EN/SYNC	24	24	I	A logic high signal on this input enables the controller operation. A pulsing signal to this pin synchronizes the main oscillator to the rising edge of an external clock source. These pulses must be of higher frequency than the free running frequency of the main oscillator set by the resistor from the RT pin.
FB	8	10	I	Inverting input of the error amplifier. In closed loop operation, the voltage at this pin is the internal reference level of 700 mV. This pin is also used for the PGOOD and OVP comparators.
GND	17	17		Ground connection to the device.
GNDS	12	13	I	Inverting input of the differential amplifier. This pin should be connected to ground at the point of load.
ILIM	4	6	I	Used to set the cycle-by-cycle current limit threshold. If ILIM threshold is reached, the PWM cycle is terminated and the converter delivers limited current to the output. Under these conditions the undervoltage threshold is reached eventually and the controller enters the hiccup mode. The controller stays in hiccup mode for seven consecutive cycles. At the eighth cycle the controller attempts a full start-up sequence.
PGOOD	13	14	0	Power good indicator of the output voltage. This open-drain output connects to the supply via an external resistor.
PWM1	21	21	0	DI LIGITORIA A LI
PWM2	20	20	0	Phase shifted PWM outputs which control the external drivers. The high output signal commands a PWM cycle. The low output signal commands controlled conduction of the synchronous rectifiers. These pins are also used to program
PWM3	19	19	0	various operating modes as follows: for three-phase mode, PWM4 is connected to 5 V; for two-phase mode, PWM2 and PWM4 are connected to 5 V.
PWM4	18	18	0	and Pyvin4 are connected to 5 v.
REF	6	8	0	Output of an internal 0.7-V reference voltage.
RT	16	16	I	Connecting a resistor from this pin to ground sets the oscillator frequency.
VIN	23	23	I	Power input for the chip. De-coupling of this pin is required.
VOUT	10	12	I	Noninverting input of the differential amplifier. This pin should be connected to VOUT at the point of load.
SS	15	15	I	Provides user programmable soft-start by means of a capacitor connected to the pin.
NC	11, 14, 25, 26	-	-	No connect pins

Submit Documentation Feedback



## **FUNCTIONAL BLOCK DIAGRAM**

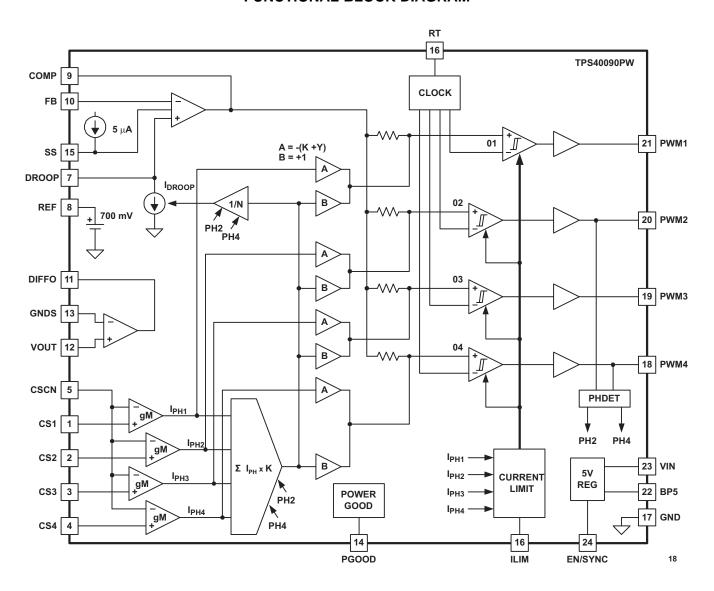



#### APPLICATION INFORMATION

#### **FUNCTIONAL DESCRIPTION**

The TPS4009x is a multiphase, synchronous, peak current mode, buck controller. The controller uses external gate drivers to operate N-channel power MOSFETs. The controller can be configured to operate in a two-, three-, or four-phase power supply.

The controller accepts current feedback signals from either current sense resistors placed in series with the filter inductors or current proportional signals derived from the inductors' DCR.

Other features include an LDO regulator with UVLO to provide single voltage operation, a differential input amplifier for precise output regulation, user programmable operation frequency for design flexibility, external synchronization capability, programmable pulse-by-pulse overcurrent protection, output overvoltage protection, and output undervoltage shutdown.

## **DIFFERENTIAL AMPLIFIER**

The unity gain differential amplifier with high bandwidth allows improved regulation at a user-defined point and eases layout constraints. The output voltage is sensed between the VOUT and GNDS pins. The output voltage programming divider is connected to the output of the amplifier (DIFFO). The differential amplifier can be used only for output voltages lower then 3.3 V.

If there is no need for a differential amplifier, or if the output voltage required is higher than 3.3-V, the differential amplifier can be disabled by connecting the GNDS pin to the BP5 pin. The voltage programming divider in this case should be connected directly to the output of the converter.

#### **CURRENT SENSING AND BALANCING**

The controller employs a peak current-mode control scheme, which naturally provides a certain degree of current balancing. With current mode, the level of current feedback should comply with certain guidelines depending on duty factor, known as *slope compensation* to avoid sub-harmonic instability. This requirement can prohibit achieving a higher degree of phase current balance. To avoid the controversy, a separate current loop that forces phase currents to match is added to the proprietary control scheme. This effectively provides high degree of current sharing independently of properties of controller's small signal response.

High-bandwidth current amplifiers can accept as an input voltage either voltage drop across dedicated precise current-sense resistors, or inductor's DCR voltage derived by an R-C network, or thermally compensated voltage derived from the inductor's DCR. The wide range of current-sense settings eases the cost and complexity constraints and provides performance superior to those found in controllers using low-side MOSFET current sensing.

Submit Documentation Feedback




### **SETTING CONTROLLER CONFIGURATION**

By default, the controller operates at four-phase configuration. The alternate number of active phases is programmed by connecting unused PWM outputs to BP5. (See Figure 1) For example, for three-phase operation, the unused fourth phase output, PWM4, should be connected to BP5. For two-phase operation, the second, PWM2, and the fourth, PWM4, outputs should be connected to BP5.

## **POWER UP**

Capacitors connected to the BP5 pin and the soft-start pin set the power-up time. When EN is high, the capacitor connected to the BP5 pin gets charged by the internal LDO as shown in Figure 2.

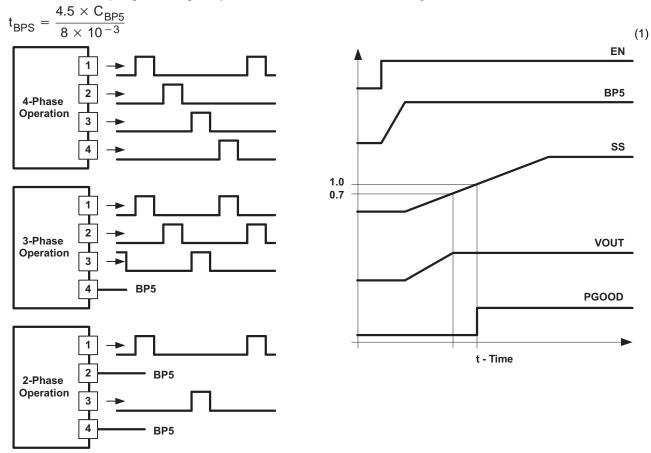

**Figure 1. Programming Controller Configuration** 

Figure 2. Power-Up Waveforms



When the BP5 pin voltage crosses its lower undervoltage threshold and the power-on reset function is cleared, the calibrated current source starts charging the soft start capacitor. The PGOOD pin is held low during the start up. The rising voltage across the capacitor serves as a reference for the error amplifier assuring start-up in a closed loop manner. When the soft start pin voltage reaches the level of the reference voltage  $V_{REF} = 0.7 \text{ V}$ , the converter's output reaches the regulation point and further rise of the soft start voltage has no effect on the output.

$$t_{SS} = \frac{0.7 \times C_{SS}}{5 \times 10^{-6}} \tag{2}$$

When the soft-start voltage reaches level of 1 V, the power good (PGOOD) function is cleared and reported on the PGOOD pin. Normally, the PGOOD pin goes high at this moment. The time from when SS begins to rise to when PGOOD is reported is:

$$t_{PG} = 1.43 \times T_{SS} \tag{3}$$

#### **OUTPUT VOLTAGE PROGRAMMING**

The converter output voltage is programmed by the R1/R2 divider from the output of the differential amplifier. The center point of the divider is connected to the inverting output of the error amplifier (FB), as shown in Figure 5.

$$V_{OUT} = 0.7 \text{ V} \times \left(\frac{\text{R1}}{\text{R2}} + 1\right) \tag{4}$$

### **CURRENT SENSE FAULT PROTECTION**

Multiphase controllers with forced current sharing are inherently sensitive to failure of a current sense component. In the event of such failure, the whole load current can be steered with catastrophic consequences into a single channel where the fault has happened. The dedicated circuit in the TPS4009x controller prevents it from starting up if any current sense pin is open or shorted to ground. The current-sense fault detection circuit is active only during device initialization, and it does not provide protection should a current-sense failure happen during normal operation.

## **OVERVOLTAGE PROTECTION**

If the voltage at the FB pin ( $V_{FB}$ ) exceeds  $V_{REF}$  by more than 16%, the TPS4009x enters into an overvoltage state. In this condition, the output signals from the controller to the external drivers is pulled low, causing the drivers to force all of the upper MOSFETs to the OFF position and all the lower MOSFETs to the ON position. As soon as  $V_{FB}$  returns to regulation, the normal operating state resumes.

0 Submit Documentation Feedback

(6)



#### **OVERCURRENT PROTECTION**

The overcurrent function monitors the voltage level separately on each current sense input and compares it to the voltage on the ILIM pin set by a divider from the controller's reference. In case a threshold of  $V_{(ILIM)}/2.7$  is exceeded the PWM cycle on the associated phase is terminated. The voltage level on the ILIM pin is determined by the following expression:

$$V_{ILIM} = 2.7 \times I_{PH(max)} \times R_{CS}$$

$$I_{PH(max)} = I_{OUT} + \frac{\left(V_{IN} - V_{OUT}\right) \times V_{OUT}}{2 \times L \times f_{SW} \times V_{IN}}$$
(5)

#### where:

- I<sub>PH(max)</sub> is a maximum value of the phase current allowed
- R<sub>CS</sub> is a value of the current sense resistor used

If the overcurrent condition continues, each phase's PWM cycle is terminated by the overcurrent signals. This puts a converter in a constant current mode with the output current programmed by the ILIM voltage. Eventually, the supply and demand equilibrium on the converter output fails and the output voltage declines. When the undervoltage threshold is reached, the converter enters a hiccup mode. The controller is stopped and the output is not regulated any more, the softstart pin function changes. It now serves as a timing capacitor for a fault control circuit. The soft-start pin is periodically charged and discharged by the fault control circuit. After seven hiccup cycles expire, the controller attempts to restore normal operation. If the overload condition is not cleared, the controller stays in the hiccup mode indefinitely. In such conditions, the average current delivered to the load is roughly 1/8 of the set overcurrent value.

#### UNDERVOLTAGE PROTECTION

If the FB pin voltage falls lower than the undervoltage protection threshold (84.5%), the controller enters the hiccup mode as it is described in the Overcurrent Protection section.

#### **FAULT-FREE OPERATION**

If the SS pin voltage is prevented from rising above the 1-V threshold, the controller does not execute nor report most faults and the PGOOD output remains low. Only the overcurrent function and current-sense fault remain active. The overcurrent protection continues to terminate PWM cycle every time when the threshold is exceeded but the hiccup mode is not entered.



## **SETTING THE SWITCHING FREQUENCY**

The clock frequency is programmed by the value of the timing resistor connected from the RT pin to ground.

$$R_{RT} = K_{PH} \times (39.2 \times 10^3 \times f_{PH}^{-1.041} - 7)$$
(7)

where:

 $K_{PH}$  is a coefficient that depends on the number of active phases. For two-phase and three-phase configurations,  $K_{PH}$ = 1.333. For four-phase configurations,  $K_{PH}$ = 1.  $f_{PH}$  is a single phase frequency, kHz. The RT resistor value is returned by the last expression in  $k\Omega$ .

To calculate the output ripple frequency, use the following equation:

$$F_{RPL} = N_{PH} \times f_{PH}$$

where:

N<sub>PH</sub> is a number of phases used in the converter.

(8)

The switching frequency of the controller can be synchronized to an external clock applied to the EN/SYNC pin. The external frequency should be somewhat higher than the free-running clock frequency for synchronization to take place.

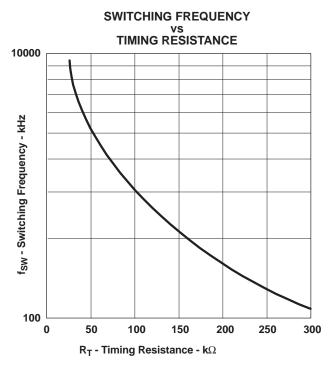


Figure 3.




#### SETTING THE OUTPUT VOLTAGE DROOP

In many applications, the output voltage of the converter is intentionally allowed to droop as load current increases. This approach (sometimes referred to as active load line programming) allows for better use of the regulation window and reduces the amount of the output capacitors required to handle the same load current step. A resistor from the REF pin to the DROOP pin sets the desired value of the output voltage droop.

$$R_{DROOP} = \frac{2500 \text{ N}_{PH} \times \text{V}_{DROOP}}{\text{I}_{OUT} \times \text{R}_{CS}} \times \frac{\text{V}_{REF}}{\text{V}_{OUT}} = \frac{2500 \text{ N}_{PH} \times \text{V}_{DROOP}}{\text{V}_{CS1} + \text{V}_{CS2} + \text{V}_{CS3} + \text{V}_{CS4}} \times \frac{\text{R2}}{\text{R1 + R2}}$$
where: (9)

- V<sub>DROOP</sub> is the value of droop at maximum load current I<sub>OUT</sub>
- N<sub>PH</sub> is number of phases
- R<sub>CS</sub> is the current-sense resistor value
- 2500  $\Omega$  is the inversed value of transconductance from the current sense pins to DROOP
- V<sub>CSx</sub>, are the average voltages on the current sense pins

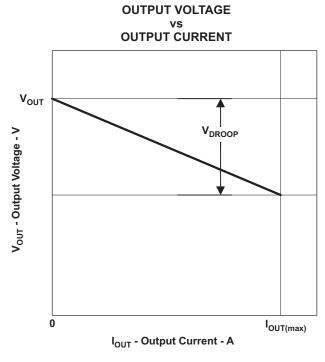

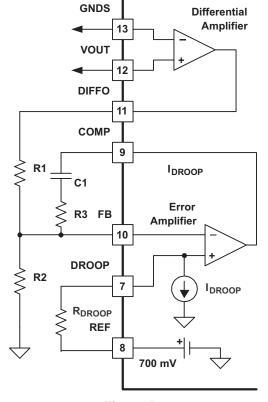


Figure 4.

Figure 5.




#### FEEDBACK LOOP COMPENSATION

The TPS4009x operates in a peak current mode and the converter exhibits a single pole response with ESR zero for which Type II compensation network is usually adequate, as shown in Figure 7.

The following equations show where the load pole and ESR zero calculations are situated.

$$f_{\text{OP}} = \frac{1}{2\pi \times R_{\text{OUT}} \times C_{\text{OUT}}}$$
  $f_{\text{ESRZ}} = \frac{1}{2\pi \times R_{\text{ESR}} \times C_{\text{OUT}}}$  (10)

To achieve desired bandwidth the error amplifier must compensate for modulator gain loss on the crossover frequency and this is facilitated by placing the zero over the load pole. The ESR zero alters the modulator's -1 slope at higher frequencies. To compensate for that alteration, the pole in-error amplifier transfer function should be added at frequency of the ESR zero as shown in Figure 6.

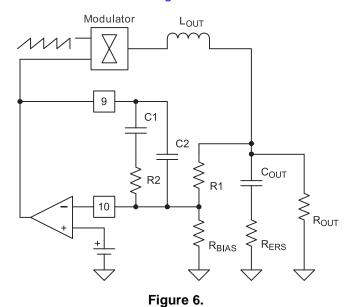

The following equations help in choosing components of the error amplifier compensation network. Fixing the value of the resistor R1 first is recommended as it simplifies further adjustments of the output voltage without altering the compensation network.


$$\text{R2} = \text{R1} \times 10^{\left(\frac{-G_{\text{OMAG}}}{20}\right)}; \quad \text{C1} = \frac{1}{\left(2\pi \times F_{\text{OP}} \times \text{R2}\right)}; \quad \text{C2} = \frac{1}{\left(2\pi \times F_{\text{ESRZ}} \times \text{R2}\right)}$$

where:

G<sub>OMAG</sub> is the control to output gain at desired system crossover frequency. (11)

Introduction of output voltage droop as a measure to reduce amount of filter capacitors changes the transfer function of the modulator as it is shown in the Figure 8.



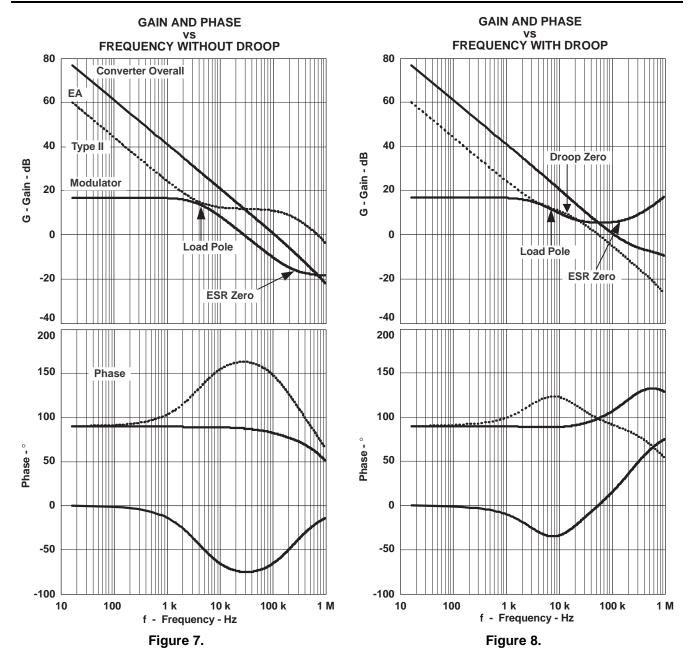



The droop function, as well as the output capacitor ESR, introduces zero on some frequency left of the crossover point.

$$F_{DROOPZ} = \frac{1}{2\pi \left(\frac{V_{DROOP}}{I_{OUT(max)}}\right) \times C_{OUT}}$$
(12)

To compensate for this zero, pole on the same frequency should be added to the error amplifier transfer function. With Type II compensation network a new value for the capacitor C2 is required compared to the case without droop.

$$C2 = \frac{C1}{2\pi \times R2 \times C1 \times (F_{DROOPZ} - 1)}$$
(13)

When attempting to close the feedback loop at frequency that is near the theoretical limit, use the above considerations as a first approximation and perform on bench measurements of closed loop parameters as effects of switching frequency proximity and finite bandwidth of voltage and current amplifiers may substantially alter them as it is shown in Figure 9.

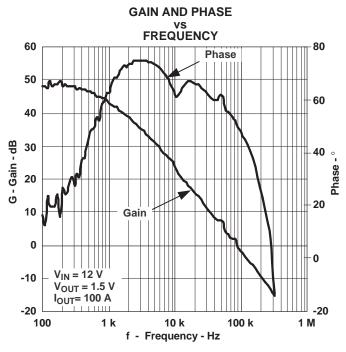


Figure 9.



#### THERMAL COMPENSATION OF DCR CURRENT SENSING

Inductor DCR current sensing is a known lossless technique to retrieve a current proportional signal. Equation 14 and Equation 15 show the calculation used to determine the DCR voltage drop for any given frequency. (See Figure 10)

$$V_{DCR} = \left(V_{IN} - V_{OUT}\right) \times \frac{DCR}{DCR + \omega \times L}$$
(14)

$$V_{C} = \left(V_{IN} - V_{OUT}\right) \times \frac{1}{\omega \times C \times \left(R + \frac{1}{\omega \times C}\right)}$$
(15)


Voltage across the capacitor is equal to voltage drop across the inductor DCR,  $V_C = V_{DCR}$  when time constant of the inductor and the time constant of the R-C network are equal:

$$V_{C} = \frac{1}{\omega \times C \times \left(R + \frac{1}{\omega \times C}\right)} = \frac{DCR}{DCR + \omega \times L}; \quad \frac{L}{DCR} = R \times C; \quad \tau_{DCRL} = \tau_{RC}$$
(16)

The output signal generated by the network shown in Figure 10 is temperature dependant due to positive thermal coefficient of copper specific resistance as determined using Equation 17. The temperature variation of the inductor coil can exceed 100°C in a practical application leading to approximately 40% variation in the output signal and in turn, respectively move the overcurrent threshold and the load line.

$$K(T) = 1 + 0.0039 \times (T - 25) \tag{17}$$

The relatively simple network shown in Figure 11 (made of passive components including one NTC resistor) can provide almost complete compensation for copper thermal variations.

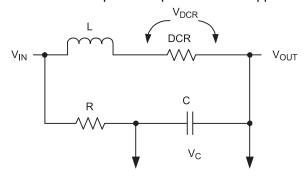

R C R2 R1 RNTC RTHE

Figure 10.

Figure 11.



The following algorithm and expressions help to determine components of the network.

1. Calculate the equivalent impedance of the network at 25°C that matches the inductor parameters in Equation 18. Use of COG type capacitors for this application is recommended. For example, for L = 0.4  $\mu$ H, DCR = 1.22 m $\Omega$ , C = 10 nF; R<sub>E</sub> = 33.3 k $\Omega$ . It is recommended to keep R<sub>E</sub> < 50 k $\Omega$  as higher values may produce false triggering of the current sense fault protection.

$$R_{E} = \frac{\overline{DCR}}{C} \tag{18}$$

- 2. It is necessary to set the network attenuation value  $K_{DIV}(25)$  at 25°C. For example,  $K_{DIV}(25) = 0.85$ . The attenuation values  $K_{DIV}(25) > 0.9$  produces higher values for NTC resistors that are harder to get from suppliers. Attenuation values lower 0.7 substantially reduce the network output signal.
- 3. Based on calculated  $R_E$  and  $K_{DIV}(25)$  values, calculate and pick the closest standard value for the resistor  $R = R_E/K_{DIV}(25)$ . For the given example  $R = 33 \text{ k}\Omega/0.85 = 38.8 \text{ k}\Omega$ . The closest standard value from 1% line is  $R = 39.2 \text{ k}\Omega$ .
- 4. Pick two temperature values at which curve fitting is made. For example T1 = 50°C and T2 = 90°C.
- 5. Find the relative values of R<sub>THE</sub> required on each of these temperatures.

$$R_{THE1} = \frac{R_{THE}(T1)}{R_{THE}(25)}$$
  $R_{THE2} = \frac{R_{THE}(T2)}{R_{THE}(25)}$  (19)

$$R_{T} = \frac{K_{DIV}(T)}{1 - K_{DIV}(T)} \times R \qquad K_{DIV}(T) = \frac{K_{DIV}(25)}{1 + 0.0039 \times (t - 25)}$$
(20)

For the given example R<sub>THE1</sub>= 0.606, R<sub>THE2</sub>=0.372.

- 6. From the NTC resistor datasheet get the relative resistance for resistors with desired curve. For the given example and curve 17 for NTHS NTC resistors from Vishay  $R_{NTC1}$ = 0.3507 and  $R_{NTC2}$ = 0.08652.
- 7. Calculate relative values for network resistors including the NTC resistor.

$$R1_{R} = \frac{\left(R_{NTC1} - R_{NTC2}\right) \times R_{E1} \times R_{E2} - R_{NTC1} \times R_{E2} \times \left(1 - R_{NTC2}\right) + R_{NTC2} \times R_{E1} \times \left(1 - R_{NTC1}\right)}{R_{NTC1} \times R_{E1} \times \left(1 - R_{NTC2}\right) - R_{NTC2} \times R_{E2} \times \left(1 - R_{NTC1}\right) - \left(R_{NTC1} - R_{NTC2}\right)}$$
(21)

$$R2_{R} = (1 - R_{NTC1}) \times \left[ \frac{1}{1 - R1_{R}} - \frac{R_{NTC1}}{R_{E1} - R1_{R}} \right]^{-1}$$
(22)

$$RNTC_{R} = \left[ \left( 1 - R1_{R} \right)^{-1} - \left( R2_{R} \right)^{-1} \right]^{-1}$$
(23)

Submit Documentation Feedback



For the given example  $R1_R$ = 0.281,  $R2_R$  = 2.079, and  $RNTC_R$  = 1.1.

- 8. Calculate the absolute value of the NTC resistor as  $R_{THE}(25)$ . In given example  $R_{NTC} = 244.3 \text{ k}\Omega$ .
- 9. Find a standard value for the NTC resistor with chosen curve type. In case the close value does not exist in a desired form factor or curve type. Chose a different type of the NTC resistor and repeat steps 6 to 9. In the example, the NTC resistor with the part number NTHS0402N17N2503J with  $R_{NTCS}(25) = 250 \text{ k}\Omega$  is close enough to the calculated value.
- 10. Calculate a scaling factor for the chosen NTC resistor as a ratio between selected and calculated NTC value and. In the example k = 1.023.

$$k = \frac{RNTC_S}{RNTC_C}$$
 (24)

11. Calculate values of the remaining network resistors.

$$R1_{C} = R_{THE}(25) \times \left[ \left( (1 - k) + k \times R1_{R} \right) \right]$$
(25)

For the given example, R1<sub>C</sub>=  $58.7~k\Omega$  and R2<sub>C</sub> =  $472.8~k\Omega$ . Pick the closest available 1% standard values: R1 =  $39.2~k\Omega$ , and R2 =  $475~k\Omega$ , thus completing the design of the thermally compensated network for the DCR current sensor.

Figure 12 illustrates the fit of the designed network to the required function.

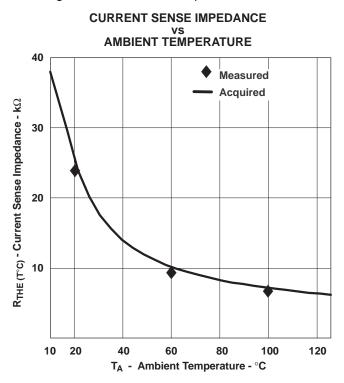


Figure 12.



## Operation with Output Voltages Higher Than 3.3 V

The TPS40090/91 controllers are designed to operate in power supplies with output voltages ranging from 0.7 V to 3.3 V. To support higher output voltages, mainly in 12 V to 5 V power supplies, the BP5 voltage needs to be increased slightly to provide enough headroom to ensure linearity of current sense amplifiers. The simple circuit on Figure 13 shows a configuration that generates a 6-V voltage source to power the controller with increased bias voltage. Both the VIN and BP5 pins should be connected to this voltage source. The differential amplifier normally excessive for higher-output voltages can be disabled by connecting GNDS pin to the BP5 pin.

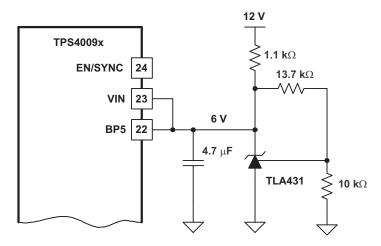


Figure 13. Biasing the TPS4009x with a 5-V Power Supply

## **High-Impedance State of TPS40091 Outputs**

The TPS40091 controller has 3-state enabled outputs to interface various gate drivers and DRMOS devices capable of turning all MOSFETs in the power supply into high-impedance state while remaining active. The common binary output commands the control MOSFET on when the PWM signal is high. Alternatively, the synchronous MOSFET is commanded on when the PWM signal is low.

The 3-state output can command both MOSFETs off when the PWM output is in the high-impedance state. This feature simplifies design of power supplies capable of starting into precharged output or allows in VR modules use of gate drivers that do not have the enable input to put VR module off line. Some DRMOS devices like the Philips PIP202 are also compatible with 3-state outputs of the multiphase controller.

The TPS40091 outputs have high impedance when the EN pin is high but the soft-start sequence has not been initiated yet. The output impedance is also high when controller is in undervoltage fault condition or disabled. Figure 14 shows a 12-V. 80-A. all-ceramic power supply capable to start into precharged outputs.

#### **DESIGN EXAMPLE**

A design example is available. See the TPS40090EVM-001 user's guide (SLUU175).



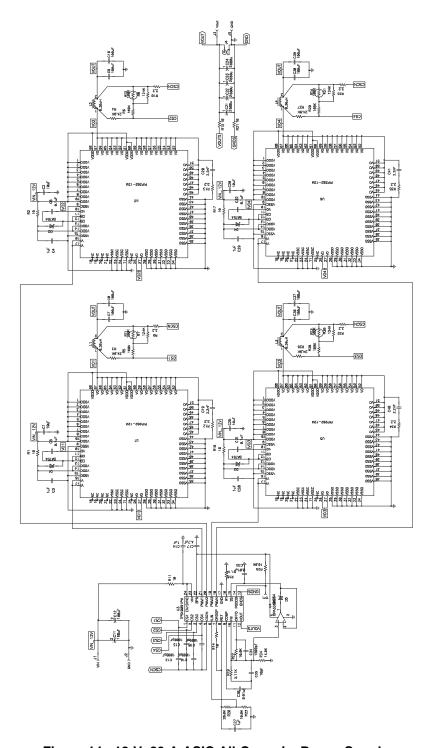


Figure 14. 12-V, 80-A ASIC All-Ceramic, Power Supply

www.ti.com 23-Apr-2022

#### **PACKAGING INFORMATION**

Orderable Device	Status (1)	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead finish/ Ball material	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
TPS40090PW	ACTIVE	TSSOP	PW	24	60	RoHS & Green	NIPDAU	Level-1-260C-UNLIM	-40 to 85	TPS40090	Samples
TPS40090PWG4	ACTIVE	TSSOP	PW	24	60	RoHS & Green	NIPDAU	Level-1-260C-UNLIM	-40 to 85	TPS40090	Samples
TPS40090PWR	ACTIVE	TSSOP	PW	24	2000	RoHS & Green	NIPDAU	Level-1-260C-UNLIM	-40 to 85	TPS40090	Samples
TPS40090RHDR	ACTIVE	VQFN	RHD	28	3000	RoHS & Green	NIPDAU	Level-2-260C-1 YEAR	-40 to 85	TPS 40090	Samples
TPS40090RHDT	ACTIVE	VQFN	RHD	28	250	RoHS & Green	NIPDAU   NIPDAUAG	Level-2-260C-1 YEAR		TPS 40090	Samples
TPS40090RHDTG4	ACTIVE	VQFN	RHD	28	250	RoHS & Green	NIPDAU	Level-2-260C-1 YEAR		TPS 40090	Samples
TPS40091PW	ACTIVE	TSSOP	PW	24	60	RoHS & Green	NIPDAU	Level-1-260C-UNLIM	-40 to 85	TPS40091	Samples
TPS40091PWR	ACTIVE	TSSOP	PW	24	2000	RoHS & Green	NIPDAU	Level-1-260C-UNLIM	-40 to 85	TPS40091	Samples

(1) The marketing status values are defined as follows:

**ACTIVE:** Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

**Green:** TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

<sup>(3)</sup> MSL, Peak Temp. - The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

<sup>&</sup>lt;sup>(4)</sup> There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.

## PACKAGE OPTION ADDENDUM

www.ti.com 23-Apr-2022

(5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.

(6) Lead finish/Ball material - Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

#### OTHER QUALIFIED VERSIONS OF TPS40090:

Automotive: TPS40090-Q1

NOTE: Qualified Version Definitions:

Automotive - Q100 devices qualified for high-reliability automotive applications targeting zero defects

## **PACKAGE MATERIALS INFORMATION**

www.ti.com 3-Jun-2022

## TAPE AND REEL INFORMATION





A0	Dimension designed to accommodate the component width
В0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

## QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
TPS40090PWR	TSSOP	PW	24	2000	330.0	16.4	6.95	8.3	1.6	8.0	16.0	Q1
TPS40090RHDR	VQFN	RHD	28	3000	330.0	12.4	5.3	5.3	1.5	8.0	12.0	Q2
TPS40090RHDT	VQFN	RHD	28	250	180.0	12.4	5.3	5.3	1.5	8.0	12.0	Q2
TPS40091PWR	TSSOP	PW	24	2000	330.0	16.4	6.95	8.3	1.6	8.0	16.0	Q1

www.ti.com 3-Jun-2022



#### \*All dimensions are nominal

7 till dillitoriolorio di o riorriiridi							
Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
TPS40090PWR	TSSOP	PW	24	2000	356.0	356.0	35.0
TPS40090RHDR	VQFN	RHD	28	3000	356.0	356.0	35.0
TPS40090RHDT	VQFN	RHD	28	250	210.0	185.0	35.0
TPS40091PWR	TSSOP	PW	24	2000	356.0	356.0	35.0

## **PACKAGE MATERIALS INFORMATION**

www.ti.com 3-Jun-2022

## **TUBE**



## \*All dimensions are nominal

Device	Package Name	Package Type	Pins	SPQ	L (mm)	W (mm)	T (µm)	B (mm)
TPS40090PW	PW	TSSOP	24	60	530	10.2	3600	3.5
TPS40090PWG4	PW	TSSOP	24	60	530	10.2	3600	3.5
TPS40091PW	PW	TSSOP	24	60	530	10.2	3600	3.5



SMALL OUTLINE PACKAGE



### NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.

  2. This drawing is subject to change without notice.

  3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not
- exceed 0.15 mm per side.
- 4. This dimension does not include interlead flash. Interlead flash shall not exceed 0.25 mm per side.
- 5. Reference JEDEC registration MO-153.



SMALL OUTLINE PACKAGE



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.



SMALL OUTLINE PACKAGE



NOTES: (continued)

- 8. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 9. Board assembly site may have different recommendations for stencil design.



5 x 5 mm, 0.5 mm pitch


PLASTIC QUAD FLATPACK - NO LEAD



Images above are just a representation of the package family, actual package may vary. Refer to the product data sheet for package details.



PLASTIC QUAD FLATPACK - NO LEAD

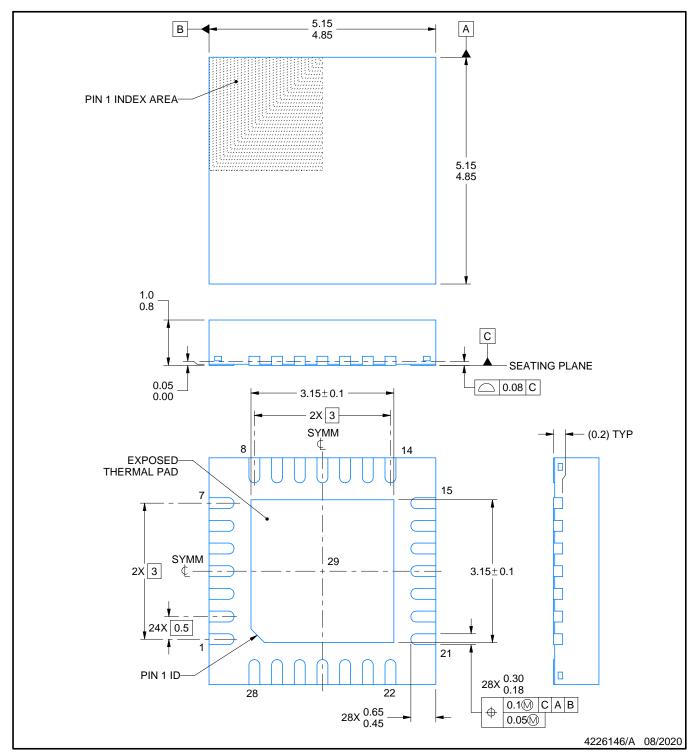


### NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.
  2. This drawing is subject to change without notice.
- 3. The package thermal pad must be soldered to the printed circuit board for thermal and mechanical performance.



PLASTIC QUAD FLATPACK - NO LEAD

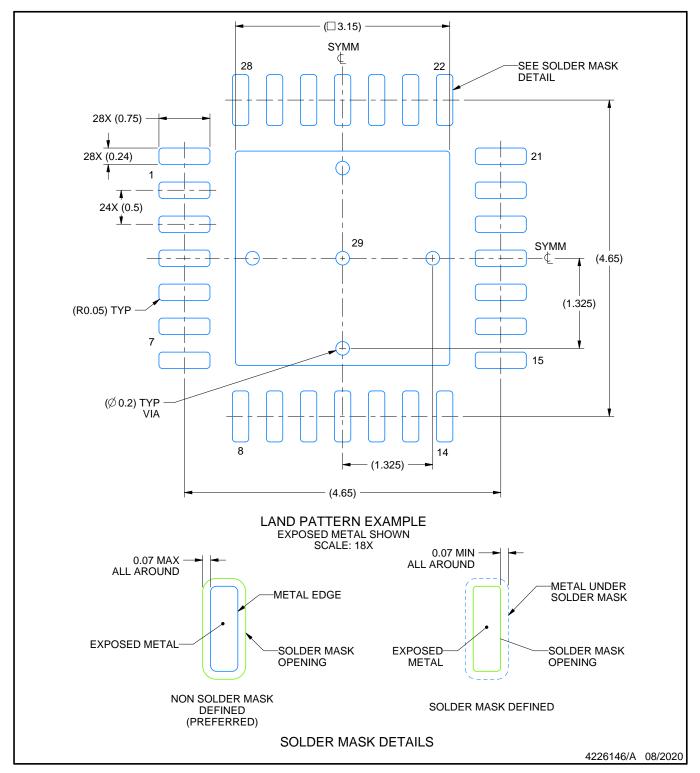


NOTES: (continued)

- 4. This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature number SLUA271 (www.ti.com/lit/slua271).
- 5. Vias are optional depending on application, refer to device data sheet. If any vias are implemented, refer to their locations shown on this view. It is recommended that vias under paste be filled, plugged or tented.



PLASTIC QUAD FLATPACK - NO LEAD

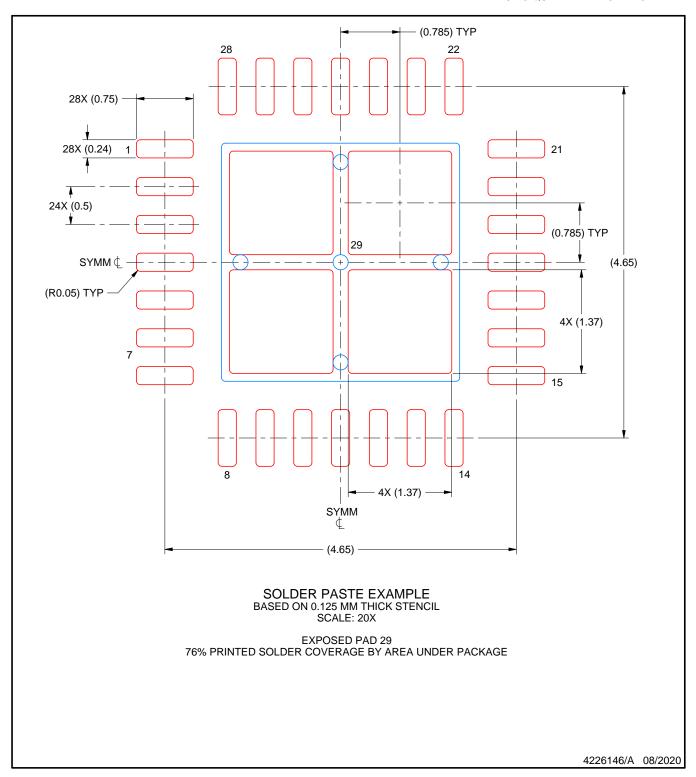

NOTES: (continued)

<sup>6.</sup> Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2022, Texas Instruments Incorporated