
# High Resolution Digital Biosensor for Wearable Applications With I<sup>2</sup>C Interface

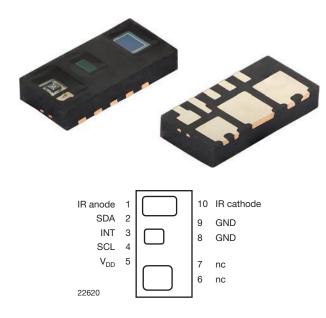

## DESCRIPTION

The VCNL4020C is a fully integrated biosensor and ambient light sensor. Fully integrated means that the infrared emitter is included in the package. It has 16 bit resolution. It includes a signal processing IC and features standard I<sup>2</sup>C communication interface. It features an interrupt function.

## APPLICATIONS

- Wearables
- Health monitoring
- Pulse oximetry

# FEATURES

- Package type: surface-mount
- Package form: SMD
- Dimensions (L x W x H in mm): 4.90 x 2.40 x 0.83
- Integrated modules: infrared emitter (IRED), ambient light sensor (ALS), photo diode (PD), and signal conditioning IC
- Interrupt function
- Supply voltage range V<sub>DD</sub>: 2.5 V to 3.6 V
- Supply voltage range IR anode: 2.5 V to 5 V
- Communication via I<sup>2</sup>C interface
- I<sup>2</sup>C bus H-level range: 1.7 V to 5 V
- Floor life: 72 h, MSL 4, according to J-STD-020
- Low stand by current consumption: 1.5 μA
- Material categorization: for definitions of compliance please see <u>www.vishay.com/doc?99912</u>

### **OPTICAL BIOSENSORS FUNCTION**

- Built-in infrared emitter and broader sensitivity photodiode allows to also work with green and red LEDs
- 16 bit effective resolution ensures excellent cross talk immunity
- Programmable LED drive current from 10 mA to 200 mA in 10 mA steps
- Excellent ambient light suppression through signal modulation

### **AMBIENT LIGHT FUNCTION**

- Built-in ambient light photo-pin-diode with close-to-human-eye sensitivity
- 16 bit dynamic range from 0.25 lx to 16 klx
- 100 Hz and 120 Hz flicker noise rejection

| PRODUCT        | SUMMARY                              |   |   |                                   |   |                          |   |
|----------------|--------------------------------------|---|---|-----------------------------------|---|--------------------------|---|
| PART<br>NUMBER | OPERATING<br>VOLTAGE<br>RANGE<br>(V) | I <sup>2</sup> C BUS<br>VOLTAGE<br>RANGE<br>(V) | LED PULSE<br>CURRENT <sup>(1)</sup><br>(mA) | AMBIENT<br>LIGHT<br>RANGE<br>(Ix) | SPECTRAL<br>BANDWIDTH<br>RANGE<br>λ <sub>0.5</sub> (nm) | OUTPUT<br>CODE           | ADC RESOLUTION<br>BIOSENSOR / AMBIENT<br>LIGHT SENSOR |
| VCNL4020C      | 2.5 to 3.6                           | 1.7 to 5  | 10 to 200                                   | 0.25 to 16 383                    | 550 to 970  | 16 bit, I <sup>2</sup> C | 16 bit / 16 bit                                       |

#### Note

<sup>(1)</sup> Adjustable through I<sup>2</sup>C interface



RoHS

COMPLIANT

HALOGEN

FREE <u>GREEN</u>

(5-2008)





# Vishay Semiconductors

# 

| ORDERING CODE  | PACKAGING     | VOLUME <sup>(1)</sup> | REMARKS                           |  |
|----------------|---------------|-----------------------|-----------------------------------|--|
| VCNL4020C-GS08 | Tapa and real | MOQ: 3300 pcs         | 4.90 mm x 2.40 mm x 0.83 mm       |  |
| VCNL4020C-GS18 | Tape and reel | MOQ: 13 000 pcs       | 4.90 1111 x 2.40 1111 x 0.83 1111 |  |

Note

<sup>(1)</sup> MOQ: minimum order quantity


| ABSOLUTE MAXIMUM F          | ABSOLUTE MAXIMUM RATINGS (T <sub>amb</sub> = 25 °C, unless otherwise specified) |                  |      |      |      |  |  |  |  |  |  |
|-----------------------------|---|------------------|------|------|------|--|--|--|--|--|--|
| PARAMETER                   | TEST CONDITION  | SYMBOL           | MIN. | MAX. | UNIT |  |  |  |  |  |  |
| Supply voltage              |   | V <sub>DD</sub>  | -0.3 | 5.5  | V    |  |  |  |  |  |  |
| Operation temperature range |   | T <sub>amb</sub> | -25  | +85  | °C   |  |  |  |  |  |  |
| Storage temperature range   |   | T <sub>stg</sub> | -25  | +85  | °C   |  |  |  |  |  |  |
| Total power dissipation     | T <sub>amb</sub> ≤ 25 °C  | P <sub>tot</sub> | -    | 50   | mW   |  |  |  |  |  |  |
| Junction temperature        |   | Tj               | -    | 100  | °C   |  |  |  |  |  |  |

| PARAMETER                          | TEST CONDITION                                     | SYMBOL           | MIN. | TYP. | MAX.  | UNIT   |
|------------------------------------|--|------------------|------|------|---|--------|
| Supply voltage V <sub>DD</sub>     |  |                  | 2.5  | -    | 3.6   | V      |
| Supply voltage IR anode            |  |                  | 2.5  | -    | 5   | V      |
| I <sup>2</sup> C bus H-level range |  |                  | 1.7  | -    | 5   | V      |
| INT H-level range                  |  |                  | 1.7  | -    | 5   | V      |
| INT low voltage                    | 3 mA sink current                                  |                  | -    | -    | 0.4   | V      |
| Current consumption                | Standby current,<br>no LED-operation               |                  | -    | 1.5  | 2   | μA     |
| Current consumption                | 2 measurements per second,<br>LED current 20 mA    |                  | -    | 5    | -   | μA     |
|                                    | 250 measurements per second,<br>LED current 20 mA  |                  | -    | 520  | -   | μA     |
| pulse mode incl. LED<br>(averaged) | 2 measurements per second,<br>LED current 200 mA   |                  | -    | 35   | -   | μA     |
|                                    | 250 measurements per second,<br>LED current 200 mA |                  | -    | 4    | 5<br>5<br>5<br>0.4<br>2<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>- | mA     |
|                                    | 2 measurements per second<br>averaging = 1         |                  | -    | 2.5  | -   | μA     |
| Current consumption ambient        | 8 measurements per second<br>averaging = 1         |                  | -    | 10   | -   | μA     |
| light mode                         | 2 measurements per second<br>averaging = 64        |                  | -    | 160  | -   | μA     |
|                                    | 8 measurements per second<br>averaging = 64        |                  | -    | 640  | -   | μA     |
| Ambient light resolution           | Digital resolution (LSB count )                    |                  | -    | 0.25 | -   | lx     |
| Ambient light output               | E <sub>V</sub> = 100 lx<br>averaging = 64          |                  | -    | 400  | -   | counts |
| I <sup>2</sup> C clock rate range  |  | f <sub>SCL</sub> | _    | -    | 3400  | kHz    |




## **CIRCUIT BLOCK DIAGRAM**

ISHAY

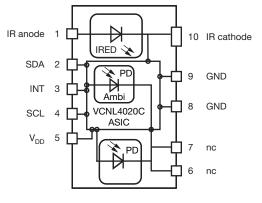


www.vishay.com


### TEST CIRCUIT

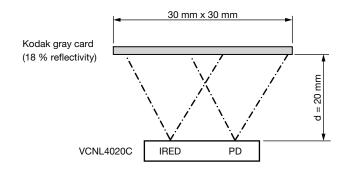



#### Note

### BASIC CHARACTERISTICS (Tamb = 25 °C, unless otherwise specified)

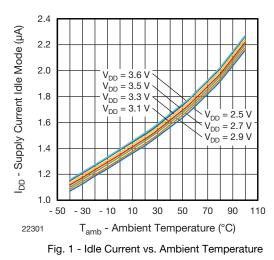

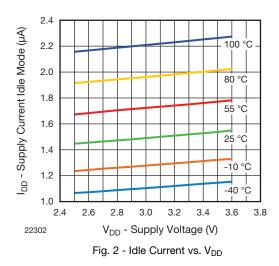

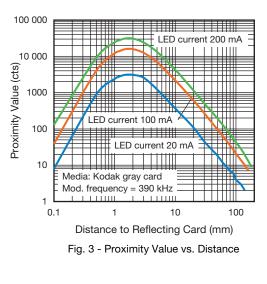

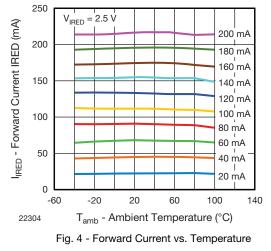

Rev. 1.1, 20-Mar-18

3 contact: sensorster Document Number: 84350

nc must not be electrically connected
 Pads 6 and 7 are only considered as solder pads



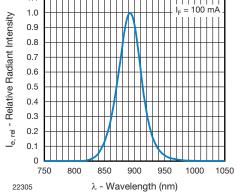


Fig. 5 - Relative Radiant Intensity vs. Wavelength

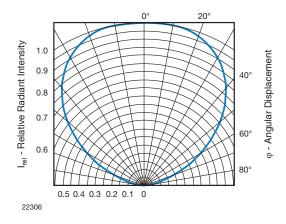


Fig. 6 - Relative Radiant Intensity vs. Angular Displacement

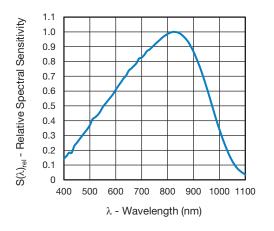


Fig. 7 - Relative Spectral Sensitivity vs. Wavelength (Biosensor)

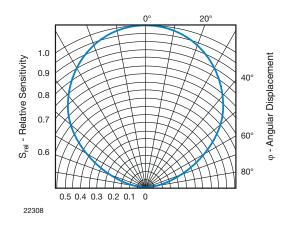


Fig. 8 - Relative Radiant Sensitivity vs. Angular Displacement (Proximity Sensor)

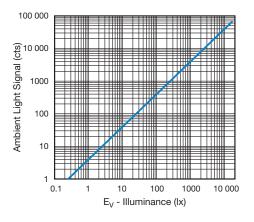


Fig. 9 - Ambient Light Value vs. Illuminance

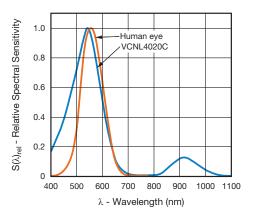



Fig. 10 - Relative Spectral Sensitivity vs. Wavelength (Ambient Light Sensor)

For technical questions, contact: <a href="mailto:sensorstechsupport@vishay.com">sensorstechsupport@vishay.com</a>

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000





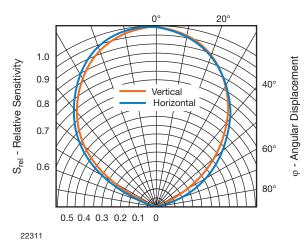


www.vishay.com

Fig. 11 - Relative Radiant Sensitivity vs. Angular Displacement (Ambient Light Sensor)

### **APPLICATION INFORMATION**

The digital biosensor VCNL4020C needs just one decoupling-C at V<sub>DD</sub> if connected to a regulated power supply.

IR cathode needs no external connection as the connection to the driver is done internally, but this allows also for adding external LEDs / IREDs to the driver.

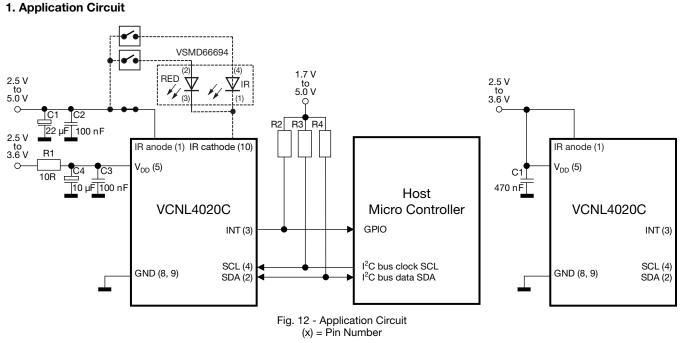

#### Note

The interrupt pin is an open drain output. The needed pull-up resistor may be connected to the same supply voltage as the application controller and the pull-up resistors at SDA / SCL. Proposed value R2 should be >1 kΩ, e.g. 10 kΩ to 100 kΩ.
 Proposed value for R3 and R4, e.g. 2.2 kΩ to 4.7 kΩ, depend also on the I<sup>2</sup>C bus speed.

For detailed description about set-up and use of the interrupt as well as more application related information see AN: "Designing VCNL4020C into an Application".

5



# **Vishay Semiconductors**

### 2. I<sup>2</sup>C Interface

The VCNL4020C contains seventeen 8 bit registers for operation control, parameter setup and result buffering. All registers are accessible via I<sup>2</sup>C communication. Figure 13 shows the basic I<sup>2</sup>C communication with VCNL4020C.

The built in I<sup>2</sup>C interface is compatible with all I<sup>2</sup>C modes (standard, fast and high speed).

 $I^2C$  H-level range = 1.7 V to 5 V.

Please refer to the I<sup>2</sup>C specification from NXP for details.

Send byte Write command to VCNL4020C

| S  | Slave address       | Wr                        | А     | Register address  | А     | I      | Data byte | А | Ρ |  |
|--|---------------------|---------------------------|-------|-------------------|-------|--------|-----------|---|---|--|
| Rece   | eive byte Read data | from                      | /CNL4 | 4020C             |       |        |           |   |   |  |
| S  | Slave address       | Wr A Register address A P |       |                   |       |        |           |   |   |  |
|  |                     |                           |       |                   |       |        |           |   |   |  |
| S  | Slave address       | Rd                        | А     | Data byte         | А     | Р      | Ρ         |   |   |  |
| S = start condition Host action P = stop condition |                     |                           |       |                   |       |        |           |   |   |  |
| A = a  | acknowledge         |                           |       | VCNL4020C respon  | se    |        |           |   |   |  |
|  | Fig                 | . 13                      | - Sei | nd Byte/Receive B | yte F | rotoco | ol        |   |   |  |

#### **Device Address**

The VCNL4020C has a fix slave address for the host programming and accessing selection. The predefined 7 bit  $I^2C$  bus address is set to 0010 011 = 13h. The least significant bit (LSB) defines read or write mode. Accordingly the bus address is set to 0010 011x = 26h for write, 27h for read.

#### Register Addresses

VCNL4020C has seventeen user accessible 8 bit registers. The register addresses are 80h (register #0) to 90h (register #16).

### **REGISTER FUNCTIONS**

#### **Register #0 Command Register**

#### Register address = 80h

The register #0 is for starting ambient light or biosensor measurements. This register contains 2 flag bits for data ready indication.

| TABLE 1 - COMMAND REGISTER #0   |  |                 |  |  |   |                                    |                               |  |  |  |  |
|---|--|-----------------|--|--|---|------------------------------------|-------------------------------|--|--|--|--|
| Bit 7   | Bit 6  | Bit 5           | Bit 4  | Bit 3                                  | Bit 2   | Bit 1                              | Bit 0                         |  |  |  |  |
| config_lock   | als_data_rdy   | bs_data_rdy     | als_od   | bs_od                                  | als_en  | bs_en                              | selftimed_en                  |  |  |  |  |
|   |  |                 | Descr  | ription                                |   |                                    |                               |  |  |  |  |
| config_lock Read only bit. Value = 1  |  |                 |  |  |   |                                    |                               |  |  |  |  |
| als_data_rdy Read only bit. Value = 1 when ambient light measurement data is available in the result registers. This bit will be reset when one of the corresponding result registers (reg #5, reg #6) is read. |  |                 |  |  |   |                                    |                               |  |  |  |  |
| bs_da   | s_data_rdy Read only bit. Value = 1 when biosensor measurement data is available in the result registers. This b<br>will be reset when one of the corresponding result registers (reg #7, reg #8) is read. |                 |  |  |   |                                    |                               |  |  |  |  |
| als   | _od  | sequence of rea | a single on-demar<br>idings and stores<br>egisters #5(HB) an | the averaged resu                      | or ambient light. If<br>ılt. Result is availa | averaging is ena ble at the end of | bled, starts a conversion for |  |  |  |  |
| bs_   | _od  |                 |  | nd measurement f<br>onversion for read | or biosensor.<br>ling in the registers        | s #7(HB) and #8(I                  | _B).                          |  |  |  |  |
| als   | _en  | R/W bit. Enable | s periodic als mea   | asurement                              |   |                                    |                               |  |  |  |  |
| bs  | _en  | R/W bit. Enable | s periodic biosens   | sor measurement                        |   |                                    |                               |  |  |  |  |
| selftimed_en R/W bit. Enables state machine and LP oscillator for self timed measurements; no measurements performed until the corresponding bit is set   |  |                 |  |  |   | asurement is                       |                               |  |  |  |  |

Note

With setting bit 3 and bit 4 at the same write command, a simultaneously measurement of ambient light and biosensor is done. Beside als\_en and / or bs\_en first selftimed\_en needs to be set. On-demand measurement modes are disabled if selftimed\_en bit is set. For the selftimed\_en mode changes in reading rates (reg #4 and reg #2) can be made only when b0 (selftimed\_en bit) = 0. For the als\_od mode changes to the reg #4 can be made only when b4 (als\_od bit) = 0; this is to avoid synchronization problems and undefined states between the clock domains. In effect this means that it is only reasonable to change rates while no selftimed conversion is ongoing.

Document Number: 84350



**Vishay Semiconductors** 

#### **Register #1 Product ID Revision Register**

Register address = 81h. This register contains information about product ID and product revision.

Register data value of current revision = 21h.

| TABLE 2 - | TABLE 2 - PRODUCT ID REVISION REGISTER #1 |                 |           |                         |  |  |  |  |  |  |  |  |
|-----------|---|-----------------|-----------|-------------------------|--|--|--|--|--|--|--|--|
| Bit 7     | Bit 6                                     | Bit 5           | Bit 4     | Bit 3 Bit 2 Bit 1 Bit 0 |  |  |  |  |  |  |  |  |
|           | Prod                                      | uct ID          |           | Revision ID             |  |  |  |  |  |  |  |  |
|           |   |                 | Descr     | iption                  |  |  |  |  |  |  |  |  |
| Prod      | uct ID                                    | Read only bits. | Value = 2 |                         |  |  |  |  |  |  |  |  |
| Revis     | Revision ID Read only bits. Value = 1     |                 |           |                         |  |  |  |  |  |  |  |  |

#### **Register #2 Rate of Biosensor Measurement**

Register address = 82h.

| TABLE 3 - BIOSENSOR RATE REGISTER #2 |           |   |   |       |       |       |       |  |  |  |  |
|--------------------------------------|-----------|---|---|-------|-------|-------|-------|--|--|--|--|
| Bit 7                                | Bit 6     | Bit 5   | Bit 4   | Bit 3 | Bit 2 | Bit 1 | Bit 0 |  |  |  |  |
|                                      |           | n/a   | Rate of biosensor Measurement (no. of measurements per second)              |       |       |       |       |  |  |  |  |
| Description                          |           |   |   |       |       |       |       |  |  |  |  |
| Bioser                               | isor rate | R/W bits.<br>000 - 1.95 mea:<br>001 - 3.90625 m<br>010 - 7.8125 m<br>011 - 16.625 m<br>100 - 31.25 mea<br>101 - 62.5 meas<br>110 - 125 meas<br>111 - 250 meas | easurements/s<br>easurements/s<br>asurements/s<br>surements/s<br>urements/s | AULT) |       |       |       |  |  |  |  |

#### Note

• If self\_timed measurement is running, any new value written in this register will not be taken over until the mode is actualy cycled.

#### **Register #3 LED Current Setting for Biosensor Mode**

Register address = 83h. This register is to set the LED current value for biosensor measurement.

The value is adjustable in steps of 10 mA from 0 mA to 200 mA.

This register also contains information about the used device fuse program ID.

| TABLE 4 -                              | TABLE 4 - LED CURRENT REGISTER #3  |       |                                     |  |  |  |  |  |  |  |  |
|--|--|-------|-------------------------------------|--|--|--|--|--|--|--|--|
| Bit 7                                  | Bit 6  | Bit 5 | Bit 5 Bit 4 Bit 3 Bit 2 Bit 1 Bit 0 |  |  |  |  |  |  |  |  |
| Fuse prog ID         LED current value |  |       |                                     |  |  |  |  |  |  |  |  |
| Description                            |  |       |                                     |  |  |  |  |  |  |  |  |
| Fuse p                                 | Fuse prog ID Read only bits.<br>Information about fuse program revision used for initial setup/calibration of the device.  |       |                                     |  |  |  |  |  |  |  |  |
| LED curr                               | R/W bits. LED current = Value (dec.) x 10 mA.LED current valueValid Range = 0 to 20d. e.g. 0 = 0 mA, 1 = 10 mA,, 20 = 200 mA (2 = 20 mA = DEFAULT)LED Current is limited to 200 mA for values higher as 20d. |       |                                     |  |  |  |  |  |  |  |  |



### **Register #4 Ambient Light Parameter Register**

Register address = 84h.

| TABLE 5 -           | AMBIENT LI      | GHT PARAM  | ETER REGIS  | TER #4                   |       |                    |       |  |  |  |
|---------------------|-----------------|--|---|--------------------------|-------|--------------------|-------|--|--|--|
| Bit 7               | Bit 6           | Bit 5  | Bit 4   | Bit 3                    | Bit 2 | Bit 1              | Bit 0 |  |  |  |
| Cont. conv.<br>mode |                 | als_rate   |   | Auto offset compensation |       | Averaging function |       |  |  |  |
|                     |                 |  | Desc  | ription                  |       |                    |       |  |  |  |
| Cont. conve         | ersion mode     | Enable = 1; Disa<br>This function ca<br>used with ambie  | R/W bit. Continuous conversion mode.<br>Enable = 1; Disable = 0 = DEFAULT<br>This function can be used for performing faster ambient light measurements. This mode should only be<br>used with ambient light on-demand measurements. Do not use with self-timed mode. Please refer to the<br>application information chapter 3.3 for details about this function. |                          |       |                    |       |  |  |  |
| Ambient light m     | easurement rate | R/W bits. Ambie<br>000 - 1 samples<br>001 - 2 samples<br>010 - 3 samples<br>011 - 4 samples<br>100 - 5 samples<br>101 - 6 samples<br>110 - 8 samples<br>111 - 10 sample  | s/s = DEFAULT<br>s/s<br>s/s<br>s/s<br>s/s<br>s/s  | ment rate                |       |                    |       |  |  |  |
| Auto offset c       | ompensation     | <ul> <li>R/W bit. Automatic offset compensation.</li> <li>Enable = 1 = DEFAULT; Disable = 0</li> <li>In order to compensate a technology, package or temperature related drift of the ambient light values there is a built in automatic offset compensation function.</li> <li>With active auto offset compensation the offset value is measured before each ambient light measurement and subtracted automatically from actual reading.</li> </ul> |   |                          |       |                    |       |  |  |  |
| Averaging           | g function      | R/W bits. Averaging function.<br>Bit values sets the number of single conversions done during one measurement cycle. Result is the average value of all conversions.<br>Number of conversions = 2 <sup>decimal_value</sup> e.g. 0 = 1 conv., 1 = 2 conv, 2 = 4 conv.,7 = 128 conv.<br>DEFAULT = 32 conv. (bit 2 to bit 0: 101)   |   |                          |       |                    |       |  |  |  |

Note

• If self\_timed measurement is running, any new value written in this register will not be taken over until the mode is actualy cycled.

#### **Register #5 and #6 Ambient Light Result Register**

Register address = 85h and 86h. These registers are the result registers for ambient light measurement readings. The result is a 16 bit value. The high byte is stored in register #5 and the low byte in register #6.

| TABLE 6 - AMBIENT LIGHT RESULT REGISTER #5                           |             |       |       |       |       |       |       |  |  |  |
|--|-------------|-------|-------|-------|-------|-------|-------|--|--|--|
| Bit 7  | Bit 6       | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |  |  |  |
|  | Description |       |       |       |       |       |       |  |  |  |
| Read only bits. High byte (15:8) of ambient light measurement result |             |       |       |       |       |       |       |  |  |  |

| TABLE 7 -  | TABLE 7 - AMBIENT LIGHT RESULT REGISTER #6  |  |  |  |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|--|--|
| Bit 7  | Bit 7         Bit 6         Bit 5         Bit 4         Bit 3         Bit 2         Bit 1         Bit 0 |  |  |  |  |  |  |  |  |  |  |
|  | Description   |  |  |  |  |  |  |  |  |  |  |
| Read only bits. Low byte (7:0) of ambient light measurement result |   |  |  |  |  |  |  |  |  |  |  |



www.vishay.com

# **Vishay Semiconductors**

### Register #7 and #8 Biosensor Measurement Result Register

Register address = 87h and 88h. These registers are the result registers for biosensor measurement readings. The result is a 16 bit value. The high byte is stored in register #7 and the low byte in register #8.

| TABLE 8 - BIOSENSOR RESULT REGISTER #7                           |   |  |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|
| Bit 7  | Bit 7         Bit 6         Bit 5         Bit 4         Bit 3         Bit 2         Bit 1         Bit 0 |  |  |  |  |  |  |  |  |
|  | Description   |  |  |  |  |  |  |  |  |
| Read only bits. High byte (15:8) of biosensor measurement result |   |  |  |  |  |  |  |  |  |

| TABLE 9 - BIOSENSOR RESULT REGISTER #8                         |   |  |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|
| Bit 7  | Bit 7         Bit 6         Bit 5         Bit 4         Bit 3         Bit 2         Bit 1         Bit 0 |  |  |  |  |  |  |  |  |
|  | Description   |  |  |  |  |  |  |  |  |
| Read only bits. Low byte (7:0) of biosensor measurement result |   |  |  |  |  |  |  |  |  |

#### **Register #9 Interrupt Control Register**

Register address = 89h.

| ABLE 10  | - INTERRUP       | T CONTROL  | REGISTER #                              | 9                                 |                      |                   |           |
|----------|------------------|--|---|-----------------------------------|----------------------|-------------------|-----------|
| Bit 7    | Bit 6            | Bit 5  | Bit 4                                   | Bit 3                             | Bit 2                | Bit 1             | Bit 0     |
|          | Int count exceed |  | n/a                                     | INT_BS_<br>ready_EN               | INT_ALS_<br>ready_EN | INT_THRES_EN      | INT_THRES |
|          |                  |  | Desci                                   | ription                           |                      |                   |           |
| Int coun | t exceed         | R/W bits. These<br>threshold<br>000 - 1 count =<br>001 - 2 count<br>010 - 4 count<br>011 - 8 count<br>100 -16 count<br>101 - 32 count<br>110 - 64 count<br>111 - 128 count | DEFAULT                                 | number of consec                  | utive measuremen     | nts needed above/ | below the |
| INT_BS_i | ready_EN         | R/W bit. Enable  | s interrupt genera                      | tion at biosensor                 | data ready           |                   |           |
| INT_ALS_ | ready_EN         | R/W bit. Enable  | s interrupt genera                      | tion at ambient da                | ata ready            |                   |           |
| INT_TH   | RES_EN           | R/W bit. Enable  | s interrupt genera                      | tion when high or                 | low threshold is e   | exceeded          |           |
| INT_THF  | RES_SEL          |  | resholds are applied are applied to als | ed to biosensor m<br>measurements | easurements          |                   |           |



### Register #10 and #11 Low Threshold

Register address = 8Ah and 8Bh. These registers contain the low threshold value. The value is a 16 bit word. The high byte is stored in register #10 and the low byte in register #11.

| TABLE 11 - LOW THRESHOLD REGISTER #10             |             |       |       |       |       |       |       |  |  |
|---|-------------|-------|-------|-------|-------|-------|-------|--|--|
| Bit 7   | Bit 6       | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |  |  |
|   | Description |       |       |       |       |       |       |  |  |
| R/W bits. High byte (15:8) of low threshold value |             |       |       |       |       |       |       |  |  |

| TABLE 12 - LOW THRESHOLD REGISTER #11           |   |  |  |  |  |  |  |  |  |
|---|---|--|--|--|--|--|--|--|--|
| Bit 7   | Bit 7         Bit 6         Bit 5         Bit 4         Bit 3         Bit 2         Bit 1         Bit 0 |  |  |  |  |  |  |  |  |
| Description                                     |   |  |  |  |  |  |  |  |  |
| R/W bits. Low byte (7:0) of low threshold value |   |  |  |  |  |  |  |  |  |

#### Register #12 and #13 High Threshold

Register address = 8Ch and 8Dh. These registers contain the high threshold value. The value is a 16 bit word. The high byte is stored in register #12 and the low byte in register #13.

| TABLE 13 - HIGH THRESHOLD REGISTER #12             |   |  |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|
| Bit 7  | Bit 7 Bit 6 Bit 5 Bit 4 Bit 3 Bit 2 Bit 1 Bit 0 |  |  |  |  |  |  |  |  |
|  | Description                                     |  |  |  |  |  |  |  |  |
| R/W bits. High byte (15:8) of high threshold value |   |  |  |  |  |  |  |  |  |

| TABLE 14 - HIGH THRESHOLD REGISTER #13           |   |  |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|
| Bit 7  | Bit 7         Bit 6         Bit 5         Bit 4         Bit 3         Bit 2         Bit 1         Bit 0 |  |  |  |  |  |  |  |  |
|  | Description   |  |  |  |  |  |  |  |  |
| R/W bits. Low byte (7:0) of high threshold value |   |  |  |  |  |  |  |  |  |

#### **Register #14 Interrupt Status Register**

Register address = 8Eh. This register contains information about the interrupt status for either biosensor or ALS function and indicates if high or low going threshold exceeded.

| TABLE 15 | TABLE 15 - INTERRUPT STATUS REGISTER #14 |   |                    |                           |  |            |           |  |  |  |
|----------|--|---|--------------------|---------------------------|--|------------|-----------|--|--|--|
| Bit 7    | Bit 6                                    | Bit 5                                       | Bit 4              | 4 Bit 3 Bit 2 Bit 1 Bit 0 |  |            |           |  |  |  |
|          | n  | /a  |                    | int_bs_ready              | int_als_ready                              | int_th_low | int_th_hi |  |  |  |
|          | Description                              |   |                    |                           |  |            |           |  |  |  |
| int_bs   | _ready                                   | R/W bit. Indicat                            | es a generated in  | terrupt for biosens       | sor  |            |           |  |  |  |
| int_als  | int_als_ready                            |   | es a generated in  | terrupt for als           |  |            |           |  |  |  |
| int_t    | h_low                                    | w R/W bit. Indicates a low threshold exceed |                    |                           |  |            |           |  |  |  |
| int_     | th_hi                                    | R/W bit. Indicat                            | es a high threshol | d exceed                  | R/W bit. Indicates a high threshold exceed |            |           |  |  |  |

Note

• Once an interrupt is generated the corresponding status bit goes to 1 and stays there unless it is cleared by writing a 1 in the corresponding bit. The int pad will be pulled down while at least one of the status bit is 1.



#### **Register #15 Biosensor Modulator Timing Adjustment**

Register address = 8Fh.

| TABLE 16   | - BIOSENSO          |   | OR TIMING A                                  | <b>DJUSTMEN</b>  | T #15             |                      |                  |  |
|------------|---------------------|---|--|--|-------------------|----------------------|------------------|--|
| Bit 7      | Bit 6               | Bit 5   | Bit 4  | Bit 3  | Bit 2 Bit 1 Bit 0 |                      |                  |  |
| M          | odulation delay tir | ne  | Biosensor frequency Modulation dead time     |  |                   |                      | ne               |  |
|            |                     |   | Desci  | ription  |                   |                      |                  |  |
| Modulation | n delay time        | R/W bits. Setting a delay time between LED signal and detectors input signal evaluation.<br>This function is for compensation of delays from LED and photo diode. Also in respect to the possibility<br>for setting different proximity signal frequency. Correct adjustment is optimizing measurement signal<br>level. (DEFAULT = 0) |  |  |                   |                      |                  |  |
| Biosenso   | r frequency         |   | neasurement is us<br>Hz (DEFAULT)<br>z<br>Hz | est signal frequenc<br>sing a square sign                          | ,                 | nt signal. Four diff | erent values are |  |
| Modulation | n dead time         | This function is  | for reducing of po                           | evaluation of LED so<br>possible disturbance<br>evel and should be | e effects.        | s of the signal. (D  | EFAULT = 1)      |  |

Note

• The settings for best performance will be provided by Vishay. With first samples this is evaluated to:

Delay time = 0; dead time = 1 and BS frequency = 00. With that register #15 should be programmed with 1 (= default value).

#### Register #16 Ambient IR Light Level Register

Register address = 90h.

This register is not intended to be used by customer.

## **3. IMPORTANT APPLICATION HINTS AND EXAMPLES**

#### 3.1 Receiver standby mode

In standby mode the receiver has the lowest current consumption of about 1.5 µA. In this mode only the I<sup>2</sup>C interface is active. This is always valid, when there are no measurement demands executed. Also the current sink for the LED is inactive, so there is no need for changing register #3 (LED current).

#### 3.2 Data Read

In order to get a certain register value, the register has to be addressed without data like shown in the following scheme. After this register addressing, the data from the addressed register is written after a subsequent read command.

| Rece  | Receive byte Read data from VCNL4020C   |      |       |                    |  |   |  |  |  |  |
|-------|---|------|-------|--------------------|--|---|--|--|--|--|
| S     | Slave address Wr A Register address   |      |       |                    |  | Ρ |  |  |  |  |
|       | -   |      |       |                    |  |   |  |  |  |  |
| S     | Slave address Rd A Data byte A P  |      |       |                    |  |   |  |  |  |  |
| P = s | S = start condition     Host action       P = stop condition     VCNL4020C response |      |       |                    |  |   |  |  |  |  |
|       | Fig. 14 - Send  | Byte | / Rec | eive Byte Protocol |  |   |  |  |  |  |

The stop condition between these write and read sequences is not mandatory. It works also with a repeated start condition.

#### Note

For reading out 2 (or more) subsequent registers like the result registers, it is not necessary to address each of the registers separately. After
one read command the internal register counter is increased automatically and any subsequent read command is accessing the next
register.

# **Vishay Semiconductors**

www.vishay.com

Example: read register "Ambient Light Result Register" #5 and #6:

Addressing:command: 26h, 85h (VCNL4020C\_l<sup>2</sup>C\_Bus\_Write\_Adr., Ambient Light Result Register #5 [85])

Read register #5:command: 27h, data (VCNL4020C\_l<sup>2</sup>C\_Bus\_Read\_Adr., {High Byte Data of Ambient Light Result register #5 [85])}

Read register #6:command: 27h, data (VCNL4020C\_I<sup>2</sup>C\_Bus\_Read\_Adr., {Low Byte Data of Ambient Light Result register #6 [86])}


### 3.3 Continuous Conversion Mode in Ambient Light Measurement


In the following is a detail description of the function "continuous conversion" (bit 7 of register #4)

#### Standard mode (bit 7 of reg #4 = 0):

In standard mode the ambient light measurement is done during a fixed time frame of 100 ms. The single measurement itself takes actually only appr. 300 µs.

The following figures show examples of this measurement timing in standard mode using averaging function 2 and 8 as examples for illustration (possible values up to 128).

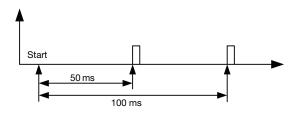

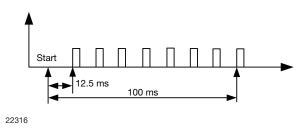

22315

Fig. 15 - Ambient Light Measurement with Averaging = 2; Final Measurement Result = Average of these 2 Measurements Fig. 16 - Ambient Light Measurement with Averaging = 8; Final Measurement Result = Average of these 8 Measurements


#### Note


•  $\geq$  Independent of setting of averaging the result is available only after 100 ms.


### Continuous conversion mode (bit 7 of register #4 = 1):


In continuous conversion mode the single measurements are done directly subsequent after each other.

See following examples in figure 17 and 18

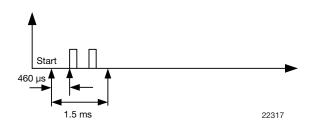



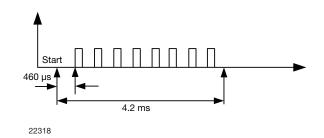





0.685

0.65

0.78


0.15

0.69

2

### **PACKAGE DIMENSIONS** in millimeters

0.73

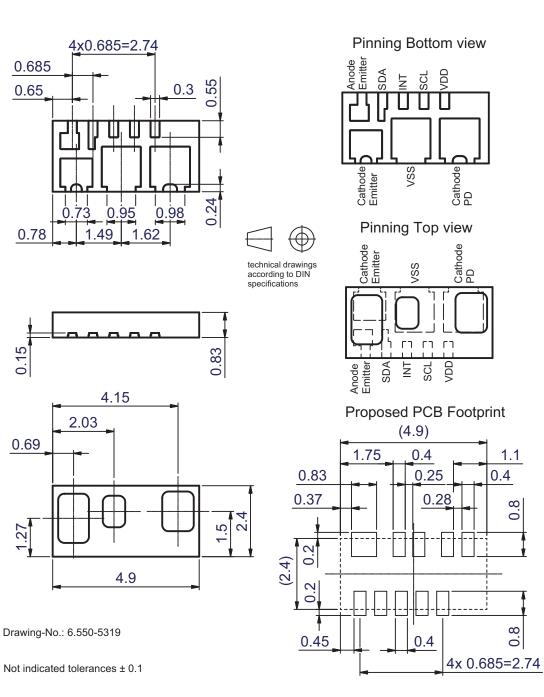


13

For technical questions, contact: <a href="mailto:sensorstechsupport@vishay.com">sensorstechsupport@vishay.com</a> THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT <a href="http://www.vishay.com/doc?91000">www.vishay.com/doc?91000</a>



## TAPE AND REEL DIMENSIONS in millimeters

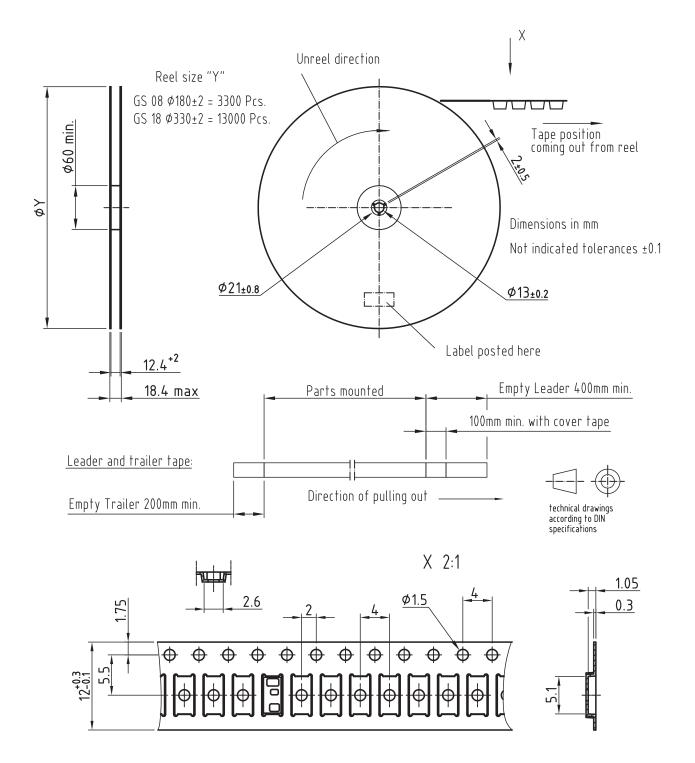


Drawing-No.: 9.700-5387.01-4


For technical questions, contact: <u>sensorstechsupport@vishay.com</u> THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT <u>www.vishay.com/doc?91000</u>



## SOLDER PROFILE

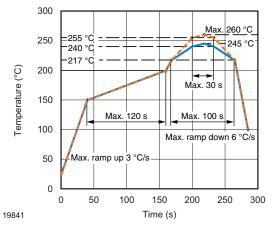

www.vishay.com



#### DRYPACK

Devices are packed in moisture barrier bags (MBB) to prevent the products from moisture absorption during transportation and storage. Each bag contains a desiccant.

## **FLOOR LIFE**

Floor life (time between soldering and removing from MBB) must not exceed the time indicated on MBB label:

Floor life: 72 h

Conditions:  $T_{amb}$  < 30 °C, RH < 60 %

Moisture sensitivity level 4, according to J-STD-020.

#### DRYING

In case of moisture absorption devices should be baked before soldering. Conditions see J-STD-020 or label. Devices taped on reel dry using recommended conditions 192 h at 40 °C (+ 5 °C), RH < 5 %.



Vishay

# Disclaimer

ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Vishay Intertechnology, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained in any datasheet or in any other disclosure relating to any product.

Vishay makes no warranty, representation or guarantee regarding the suitability of the products for any particular purpose or the continuing production of any product. To the maximum extent permitted by applicable law, Vishay disclaims (i) any and all liability arising out of the application or use of any product, (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.

Statements regarding the suitability of products for certain types of applications are based on Vishay's knowledge of typical requirements that are often placed on Vishay products in generic applications. Such statements are not binding statements about the suitability of products for a particular application. It is the customer's responsibility to validate that a particular product with the properties described in the product specification is suitable for use in a particular application. Parameters provided in datasheets and / or specifications may vary in different applications and performance may vary over time. All operating parameters, including typical parameters, must be validated for each customer application by the customer's technical experts. Product specifications do not expand or otherwise modify Vishay's terms and conditions of purchase, including but not limited to the warranty expressed therein.

Hyperlinks included in this datasheet may direct users to third-party websites. These links are provided as a convenience and for informational purposes only. Inclusion of these hyperlinks does not constitute an endorsement or an approval by Vishay of any of the products, services or opinions of the corporation, organization or individual associated with the third-party website. Vishay disclaims any and all liability and bears no responsibility for the accuracy, legality or content of the third-party website or for that of subsequent links.

Except as expressly indicated in writing, Vishay products are not designed for use in medical, life-saving, or life-sustaining applications or for any other application in which the failure of the Vishay product could result in personal injury or death. Customers using or selling Vishay products not expressly indicated for use in such applications do so at their own risk. Please contact authorized Vishay personnel to obtain written terms and conditions regarding products designed for such applications.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any conduct of Vishay. Product names and markings noted herein may be trademarks of their respective owners.