

# MAX38889A Evaluation Kit

Evaluates: MAX38889

## General Description

The MAX38889A evaluation kit (EV kit) evaluates the MAX38889 supercapacitor backup regulator, which is designed to transfer power between a supercapacitor and a system supply rail. When the main battery is present and above the minimum system voltage for charging, the MAX38889 charges the supercapacitor with an average current of 1.5A.

Once the supercapacitor is charged, the circuit draws only 4 $\mu$ A of current while it maintains the supercapacitor in its ready state. When the main battery is removed, the MAX38889 draws power from the supercapacitor and regulates the system voltage to the set backup voltage with a programmed maximum peak inductor current of 3A. The MAX38889 is externally programmable for maximum supercapacitor voltage, system backup voltage, peak charging, and peak backup inductor currents.

## Features and Benefits

- 2.5V to 5.5V System Output Voltage Range
- 0.5V to 5.5V Supercapacitor Voltage Range
- 3A Peak Charging and Backup Inductor Currents
- Resistor-Adjustable VSYS, VCAP Voltages
- Resistor-Adjustable Charging and Backup Currents
- Proven Two-Layer, 2oz Copper PCB Layout
- Demonstrates Compact Solution Size
- Fully Assembled and Tested

## MAX38889A EV Kit Files

FILE	DESCRIPTION
MAX38889A EV BOM	EV Kit Bill of Materials
MAX38889A EV PCB Layout	EV Kit Layout
MAX38889A EV Schematic	EV Kit Schematic

[Ordering Information](#) appears at end of data sheet.

## Quick Start

### Required Equipment

- MAX38889A EV Kit
- 6V, 4A DC Power Supply
- Two Digital Multimeters (DMM)

### Procedure

The EV kit is fully assembled and tested. Use the following steps to verify board operation.

**Caution: Do not turn on the power supply until all connections are completed.**

- 1) Verify that a shunt is installed onto pins 1 and 2, jumper ENC (charging enabled).
- 2) Verify that a shunt is installed onto pins 1 and 2, jumper ENB (backup enabled).
- 3) Verify that jumper LOAD is opened. (No load is connected across VSYS and PGND.)
- 4) Set the power supply output to 3.4V and disable the power supply.
- 5) Connect the power supply between the VSYS and PGND terminal posts.
- 6) Connect the DMM between the VSYS and PGND terminal posts.
- 7) Connect the DMM between the VCAP and PGND terminal posts.
- 8) Enable the power supply and verify that the supercapacitor voltage at VCAP is ramping up and stops at about 2.7V.
- 9) Disable and disconnect the power supply from the VSYS and PGND terminal posts.
- 10) Verify that VSYS regulates to 3V and the supercapacitor starts to discharge.
- 11) Install jumper JU2. (This connects a 4.02 $\Omega$  load across VSYS and PGND.)
- 12) Verify that VSYS regulates to 3V while VCAP is ramping down to 1V.
- 13) Verify that VSYS is 0V when VCAP drops below 1V.

MAX38889A EV Kit Photo



## Detailed Description of Hardware

The MAX38889A EV kit provides a flexible circuit to evaluate the supercapacitor backup regulator. External components allow a wide range of system and supercapacitor voltages as well as charging and discharging currents.

### Charger Enable (ENC)

The MAX38889A EV kit provides a jumper (ENC) to enable or disable the supercapacitor charging by the MAX38889 when VSYS is above the charging threshold. See [Table 1](#) for ENC jumper settings.

**Table 1. ENC**

SHUNT POSITION	DESCRIPTION
1-2*	EN = VSYS. Charging Enabled
2-3	EN = PGND. Charging Disabled

\*Default position

### System Backup (ENB)

The MAX38889A EV kit provides a jumper (ENB) to enable or disable the MAX38889 system backup while VSYS drops below the backup threshold. See [Table 2](#) for ENB jumper settings.

**Table 2. ENB**

SHUNT POSITION	DESCRIPTION
1-2*	EN = VSYS. Backup Enabled
2-3	EN = PGND. Backup Disabled

\*Default position

### VSYS Load (LOAD)

The MAX38889A EV kit provides a jumper (LOAD) to connect a 4.02Ω resistive load across VSYS and PGND to simulate a discharging scenario during test. See [Table 3](#) for LOAD jumper settings.

**Table 3. LOAD**

SHUNT POSITION	DESCRIPTION
1-2	Test mode: A 4.02Ω resistive load is connected across VSYS and PGND
Any 1 pin only*	Normal operating mode

\*Default position

### Charge Mode

When the main battery is present and above the minimum system voltage for charging, the MAX38889 charges the supercapacitor with an average current of 1.5A. The MAX38889A EV kit backup voltage is set to 3V by resistors R5 and R6 with  $V_{FBS} = 1.2V$ .

### Ready Mode

The MAX38889A EV kit maximum supercapacitor voltage is set to 2.7V by resistors R1, R2, and R3 with  $V_{FBCH} = 0.5V$ . Once the supercapacitor is charged to the set maximum charge voltage of 2.7V, the MAX38889 consumes only 4 $\mu$ A current. The MAX38889A EV kit provides a RDY test point to monitor the supercapacitor charge status. The RDY test point will be high when the voltage of the FBCR pin crosses the FBCR threshold ( $V_{TH\_FBCR} = 0.5V$ ) set by R1, R2, and R3. In this EV kit, the VCAP at which RDY goes high is 1.5V. Similarly, when the supercapacitor is providing backup, the RDY flag goes low when the supercapacitor discharges below 1.5V.

### Discharge (Backup) Mode

When the main battery is removed and  $V_{FBS}$  drops to 1.2V, the MAX38889 draws power from the supercapacitor and regulates the VSYS to the set backup voltage. The backup voltage is set to 3V by resistors R5 and R6 with  $V_{FBS} = 1.2V$ .

The MAX38889A EV kit provides a BKB test point to monitor the system backup status. BKB is pulled low when the system is backing up (the supercapacitor is discharging) and pulled high when the system is charging or in idle state.

### Charge/Backup Current Configuration

The MAX38889A EV kit provides a resistor R4 to configure the charge/backup peak inductor current.

The peak inductor current is set by resistor R4 connecting between the ISET and GND pins.

$$\text{Peak charging current (I}_{LX\_CHG}) = 3A \times \left( \frac{33k\Omega}{R4} \right)$$

$$\text{Peak backup current (I}_{LX\_BU}) = 3A \times \left( \frac{33k\Omega}{R4} \right)$$

Set R4 to 33k $\Omega$  to ensure accurate current compliance.

## Ordering Information

PART	TYPE
MAX38889AEVKIT#	EV Kit

#Denotes RoHS-compliant.

## Component Suppliers

SUPPLIER	WEBSITE
AVX	<a href="http://www.avx.com">www.avx.com</a>
Kemet	<a href="http://www.kemet.com">www.kemet.com</a>
Murata/TOKO	<a href="http://www.murata.com">www.murata.com</a>
Würth Electronics	<a href="http://www.we-online.com">www.we-online.com</a>


Note: Indicate that you are using the MAX38889A when contacting these component suppliers.

## MAX38889A EV Kit Bill of Materials


ITEM	REF_DES	QTY	VALUE	DESCRIPTION	MFG PART #	MANUFACTURER
1	BKB, RDY	2	N/A	TEST POINT; PIN DIA=0.11N; TOTAL LENGTH=0.3IN; BOARD HOLE=0.04IN; WHITE; PHOSPHOR BRONZE WIRE SILVER;	5002	KEYSTONE
2	C1, C6, C7	3	22µF	CAP; SMT (1206); 22µF; 10%; 10V; X7R; CERAMIC	GCM31CR71A226KE02	MURATA
3	C2	1	11F	CAP; THROUGH HOLE- RADIAL LEAD; 11F; +30%/- 10%; 2.7V; ALUMINUM- ELECTROLYTIC;	SCCS30B116SRBA1	AVX
4	C3	1	0.47µF	CAP; SMT (0603); 0.47µF; 10%; 16V; X7R; CERAMIC	C0603C474K4RAC; GRM188R71C474K; EMK107B7474KA; C1608X7R1C474K080AC	KEMET; MURATA; TAIYO YUDEN; TDK
5	C4, C5	2	47µF	CAP; SMT (1210); 47µF; 10%; 10V; X7R; CERAMIC	GRM32ER71A476KE15	MURATA
6	C8	1	1µF	CAP; SMT (0603); 1µF; 10%; 16V; X7R; CERAMIC	C0603C105K4RAC; C1608X7R1C105K080AC; EMK107B7105KA; CGA3E1X7R1C105K080AC ; 0603YC105KAT2A	KEMET; MURATA; TDK; TAIYO YUDEN; TDK; AVX
7	C11	1	2200pF	CAP; SMT (0603); 2200pF; 10%; 100V; X7R; CERAMIC	C0603C222K1RAC	KEMET
8	ENB, ENC	2	PEC03SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 3PINS	PEC03SAAN	SULLINS
9	GND	1	N/A	TEST POINT; PIN DIA=0.11N; TOTAL LENGTH=0.3IN; BOARD HOLE=0.04IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;	5001	KEYSTONE
10	L1	1	0.47µH	INDUCTOR; SMT (1008); METAL; 0.47µH; 20%; 4.9A	DFE252012F-R47M	MURATA
11	LOAD	1	PEC02SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 2PINS	PEC02SAAN	SULLINS
12	LX, VCAP, VSY5	3	131-4353-00	CONNECTOR; WIREMOUNT; CIRCUIT BOARD TEST POINT MINIATURE PROBE; STRAIGHT; 4PINS	131-4353-00	TEKTRONICS
13	PGND, TP1-TP3	4	108-0740-001	CONNECTOR; MALE; PANELMOUNT; BANANA JACK; STRAIGHT; 1PIN	108-0740-001	EMERSON NETWORK POWER
14	R1	1	499kΩ	RES; SMT (0603); 499kΩ; 1%; +/-100PPM/DEGC; 0.1000W	CRCW0603499KFK; ERJ- 3EKF4993; RC0603FR- 07499KL	VISHAY DALE; PANASONIC; YAGEO
15	R2	1	402kΩ	RES; SMT (0603); 402kΩ; 1%; +/-100PPM/DEGC; 0.1000W	CRCW06034023FK; ERJ- 3EKF4023	VISHAY; PANASONIC

16	R3, R6	2	1.82M $\Omega$	RES; SMT (0603); 1.82M $\Omega$ ; 1%; +/-100PPM/DEGK; 0.1000W	CRCW06031M82FK	VISHAY
17	R4	1	33k $\Omega$	RES; SMT (0603); 33k $\Omega$ ; 1%; +/-100PPM/DEGC; 0.1000W	CRCW060333K0FK	VISHAY DALE
18	R5	1	1.21M $\Omega$	RES; SMT (0603); 1.21M $\Omega$ ; 1%; +/-100PPM/DEGK; 0.1000W	CRCW06031M21FK	VISHAY
19	R7, R8	2	1M $\Omega$	RES; SMT (0603); 1M $\Omega$ ; 5%; +/-200PPM/DEGC; 0.1000W	CRCW06031M00JN	VISHAY DALE
20	R9	1	0 $\Omega$	RES; SMT (0603); 0 $\Omega$ ; JUMPER; JUMPER; 0.1000W	CRCW06030000Z0	VISHAY DALE
21	R10	1	4.02 $\Omega$	RES; SMT (2512); 4.02 $\Omega$ ; 1%; +/-200PPM/DEGK; 1W	CRCW25124R02FN	VISHAY DALE
22	R11	1	20k $\Omega$	RES; SMT (0603); 20k $\Omega$ ; 1%; +/-100PPM/DEGC; 0.1000W	MCR03EZPFX2002; ERJ- 3EKF2002; CR0603-FX- 2002ELF; CRCW060320K0FK	ROHM; PANASONIC; BOURNS; VISHAY DALE
23	SU1-SU3	3	SX1100-B	TEST POINT; JUMPER; STR; TOTAL LENGTH=0.24IN; BLACK; INSULATION=PBT; PHOSPHOR BRONZE CONTACT=GOLD PLATED	S1100-B; SX1100-B; STC02SYAN	KYCON; KYCON; SULLINS ELECTRONICS CORP.
24	U1	1	MAX38889AA TE+	IC; REG; REVERSIBLE BUCK/BOOST REGULATOR; TQFN16-EP	MAX38889AATE+	MAXIM
25	PCB	1	PCB	PCB:MAX38889A	MAX38889A	MAXIM
26	J2-J5	0	MAXIMPAD	EVK KIT PARTS; MAXIM PAD; WIRE; NATURAL; SOLID; WEICO WIRE; SOFT DRAWN BUS TYPE-S; 20AWG	9020 BUSS	WEICO WIRE
TOTAL		39				


MAX38889A EV Kit Schematic

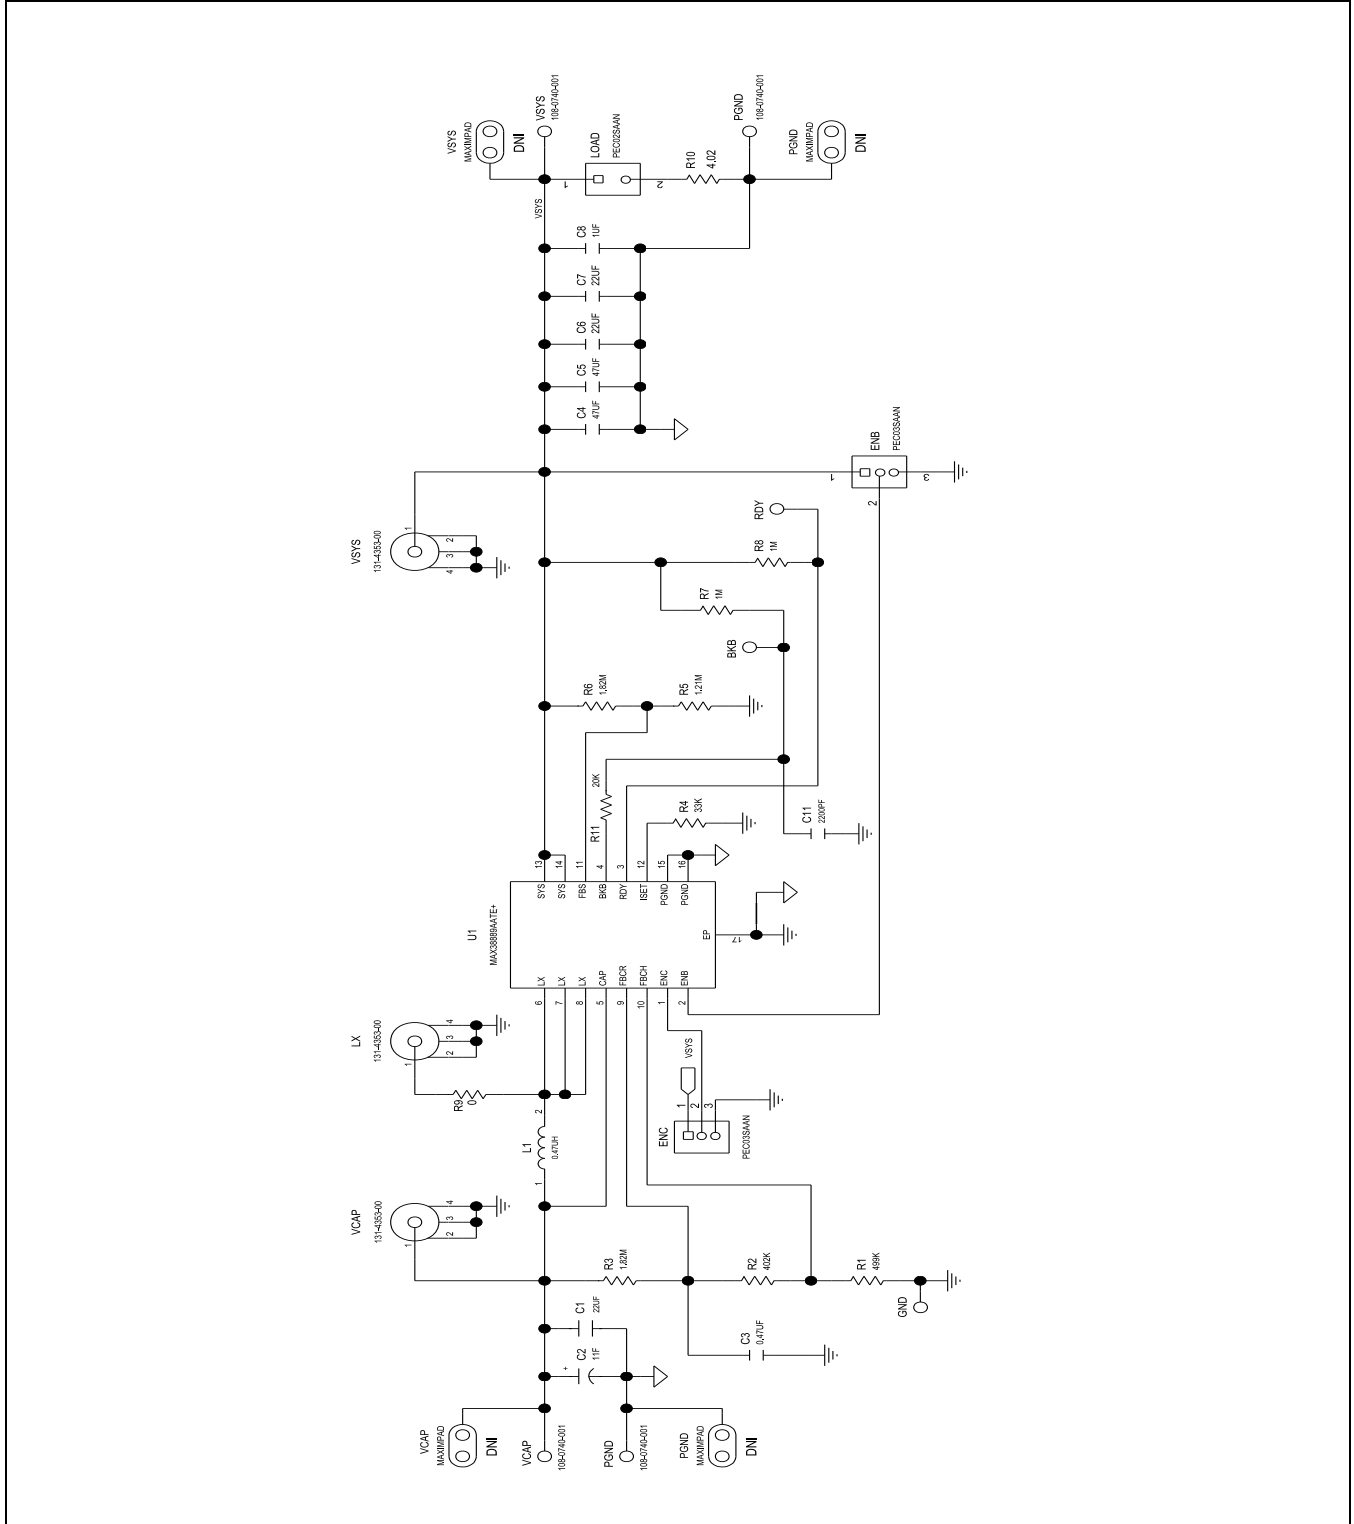


MAX38889A EV Kit PCB Layout

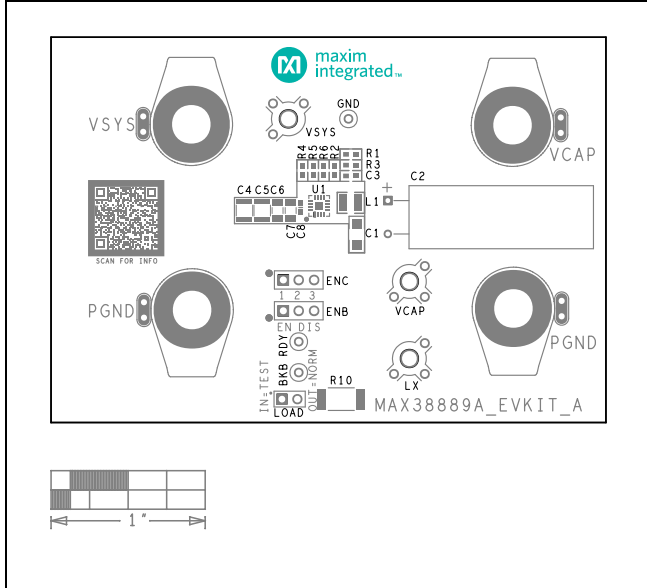


MAX38889A EV Kit Component Placement Guide—Top Silkscreen

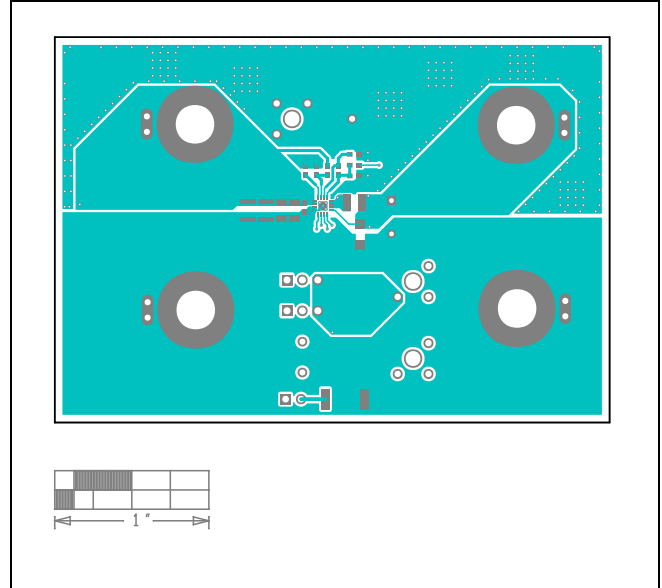

MAX38889A EV Kit PCB Layout—Top

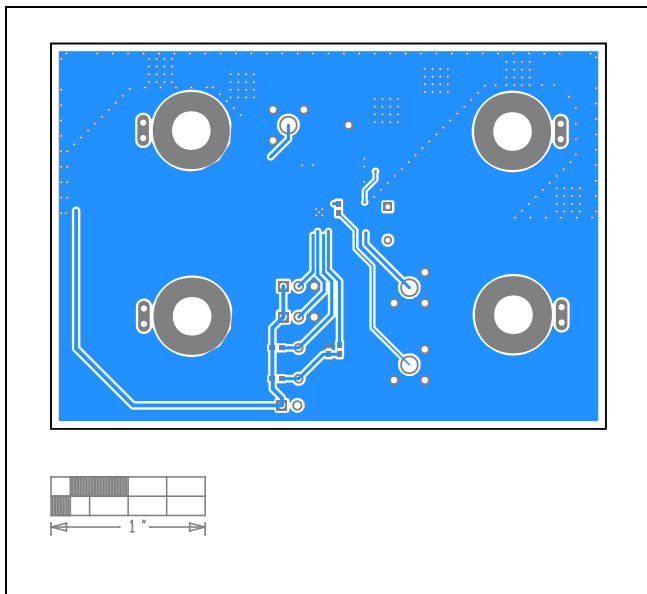

MAX38889A EV Kit PCB Layout—Bottom

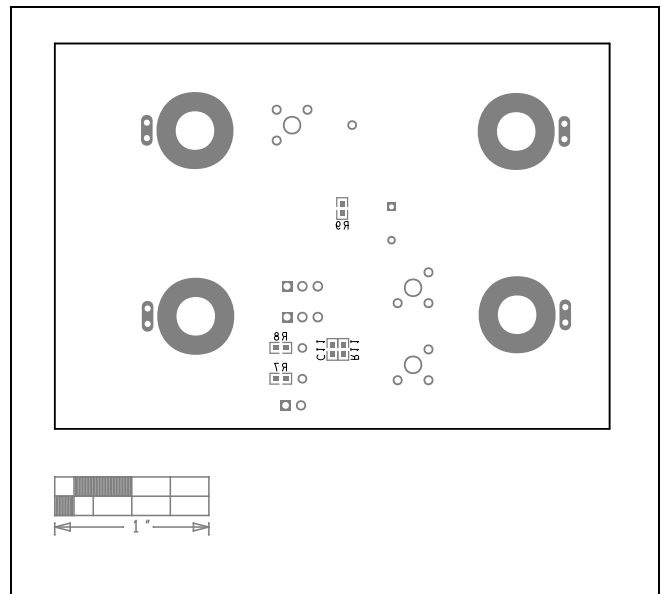

MAX38889A EV Kit Component Placement Guide—Bottom Silkscreen



**Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	4/21	Initial release	—

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at <https://www.maximintegrated.com/en/storefront/storefront.html>.

*Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.*

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Maxim Integrated:](#)

[MAX38889AEVKIT#](#)